

# MOUNTING AND OPERATING INSTRUCTIONS

**samson**

**EB 8052 EN**

**Translation of original instructions**



Type 3251/3251-AM Valve with Type 3271 Actuator

## **Type 3251 and Type 3251-AM Valve · ANSI version**

In combination with an actuator, e.g. a Type 3271 or Type 3277 Pneumatic Actuator

**CE**

**Note on these mounting and operating instructions**

These mounting and operating instructions (EB) assist you in mounting and operating the device safely. The instructions are binding for handling SAMSON devices. The images shown in this document are for illustration purposes only. The actual product may vary.

- ⇒ For the safe and proper use of these instructions, read them carefully and keep them for later reference.
- ⇒ If you have any additional questions not related to the contents of this document, contact SAMSON's After-sales Service (aftersaleservice@samsongroup.com).



Documents relating to the device, such as the mounting and operating instructions, are available on our website:  
▶ <https://www.samsongroup.com/en/downloads/documentation>

**Definition of signal words**

**⚠ DANGER**

*Hazardous situations which, if not avoided, will result in death or serious injury*

**⚠ WARNING**

*Hazardous situations which, if not avoided, could result in death or serious injury*

**ⓘ NOTICE**

*Property damage message or malfunction*

**ℹ Note**

*Additional information*

**💡 Tip**

*Recommended action*

<b>1</b>	<b>Safety instructions and measures.....</b>	<b>5</b>
1.1	Notes on possible severe personal injury.....	7
1.2	Notes on possible personal injury.....	7
1.3	Notes on possible property damage.....	9
1.4	Notes on the use of an RFID tag.....	10
1.5	Warnings on the device.....	10
<b>2</b>	<b>Markings on the device.....</b>	<b>11</b>
2.1	Valve nameplate.....	11
2.2	Actuator nameplate.....	12
2.3	Material numbers.....	12
2.4	Label when an adjustable packing is installed.....	12
2.5	Optional RFID tag.....	12
<b>3</b>	<b>Design and principle of operation.....</b>	<b>13</b>
3.1	Fail-safe positions.....	14
3.2	Versions.....	14
3.3	Additional fittings.....	14
3.4	Valve accessories.....	15
3.5	Technical data.....	15
<b>4</b>	<b>Shipment and on-site transport.....</b>	<b>24</b>
4.1	Accepting the delivered goods.....	24
4.2	Removing the packaging from the valve.....	24
4.3	Transporting and lifting the valve.....	24
4.3.1	Transporting the valve.....	25
4.3.2	Lifting the valve.....	26
4.4	Storing the valve.....	26
<b>5</b>	<b>Installation.....</b>	<b>28</b>
5.1	Installation conditions.....	28
5.2	Preparation for installation.....	29
5.3	Mounting the device.....	30
5.3.1	Mounting the external anti-rotation fixture.....	30
5.3.2	Mounting the actuator onto the valve.....	36
5.4	Installing the valve into the pipeline.....	37
5.5	Testing the installed valve.....	38
5.5.1	Leak test.....	39
5.5.2	Travel motion.....	40
5.5.3	Fail-safe position.....	40
5.5.4	Pressure test.....	40
<b>6</b>	<b>Start-up.....</b>	<b>41</b>
<b>7</b>	<b>Operation.....</b>	<b>43</b>
7.1	Normal operation.....	43
7.2	Manual operation.....	43
<b>8</b>	<b>Malfunctions.....</b>	<b>44</b>
8.1	Troubleshooting.....	44
8.2	Emergency action.....	45
<b>9</b>	<b>Servicing.....</b>	<b>46</b>
9.1	Periodic testing.....	47
9.2	Service work preparations.....	49
9.3	Installing the valve after service work.....	50
9.4	Service work.....	50

## Contents

9.4.1	Replacing the gasket.....	51
9.4.2	Replacing the packing.....	52
9.4.3	Replacing the seat and plug.....	54
9.5	Ordering spare parts and operating supplies.....	56
<b>10</b>	<b>Decommissioning.....</b>	<b>57</b>
<b>11</b>	<b>Removal.....</b>	<b>59</b>
11.1	Removing the valve from the pipeline.....	60
11.2	Removing the actuator from the valve.....	60
<b>12</b>	<b>Repairs.....</b>	<b>61</b>
12.1	Returning devices to SAMSON.....	61
<b>13</b>	<b>Disposal.....</b>	<b>62</b>
<b>14</b>	<b>Certificates.....</b>	<b>63</b>
14.1	Certificates for Type 3251.....	63
14.2	Certificates for Type 3251-AM.....	72
<b>15</b>	<b>Appendix.....</b>	<b>76</b>
15.1	Tightening torques, lubricants and tools.....	76
15.2	Spare parts.....	76
15.3	After-sales service.....	78



# 1 Safety instructions and measures

## Intended use

The SAMSON Type 3251 or Type 3251-AM Globe Valve in combination with an actuator (e.g. Type 3271 or Type 3277 Pneumatic Actuator) is designed to regulate the flow rate, pressure or temperature of liquids, gases or vapors.

Only the Type 3251 Valve can be used after prior consultation and sizing for special applications, such as oxygen, chlorine, phosgene, hydrogen sulfide (NACE), hydrogen or molten salt service. The Type 3251-AM Valve **cannot** be used for such applications. The Type 3251-AM Valve is also **not** suitable for pressure swing adsorption (PSA) applications. In this case, the Type 3251 Valve can be used.

The valve with its actuator is designed to operate under exactly defined conditions (e.g. operating pressure, process medium, temperature). Therefore, operators must ensure that the control valve is only used in operating conditions that meet the specifications used for sizing the valve at the ordering stage. In case operators intend to use the control valve in applications or conditions other than those specified, contact SAMSON. SAMSON does not assume any liability for damage resulting from the failure to use the device for its intended purpose or for damage caused by external forces or any other external factors.

⇒ Refer to the technical data and nameplate for limits and fields of application as well as possible uses.

## Reasonably foreseeable misuse

The control valve is not suitable for the following applications:

- Use outside the limits defined during sizing and by the technical data
- Use outside the limits defined by the valve accessories connected to the control valve

Furthermore, the following activities do not comply with the intended use:

- Use of non-original spare parts
- Performing service and repair work not described

## Qualifications of operating personnel

The control valve must be mounted, started up, serviced and repaired by fully trained and qualified personnel only; the accepted industry codes and practices must be observed. According to these mounting and operating instructions, trained per-

sonnel refers to individuals who are able to judge the work they are assigned to and recognize possible hazards due to their specialized training, their knowledge and experience as well as their knowledge of the applicable standards.

Welding operations are to be performed only by personnel who has the necessary qualification to perform the applied welding procedure and handle the materials used.

Explosion-protected versions of this device are to be operated only by personnel who has undergone special training or instructions or who is authorized to work on explosion-protected devices in hazardous areas.

The operating personnel must be specially trained for the correct and safe handling of oxygen when valves are used for oxygen service.

The operating personnel must be specially trained for the correct and safe handling of oxygen when valves are used for oxygen service.

## Personal protective equipment

SAMSON recommends checking the hazards posed by the process medium being used (e.g. ► GESTIS hazardous substances database).

Depending on the process medium and/or the activity, the protective equipment required includes:

- Protective clothing, gloves, eye protection and respiratory protection in applications with hot, cold and/or corrosive media
- Wear hearing protection when working near the valve
- Hard hat
- Safety harness, e.g. when working at height
- Safety footwear, if applicable ESD (electrostatic discharge) footwear

⇒ Check with the plant operator for details on further protective equipment.

## Revisions and other modifications

Revisions, conversions or other modifications of the product are not authorized by SAMSON. They are performed at the user's own risk and may lead to safety hazards, for example. Furthermore, the product may no longer meet the requirements for its intended use.

## Safety features

The fail-safe position of the control valve upon air supply or control signal failure depends on the actuator used (see associated actuator documenta-

tion). When the valve is combined with a SAMSON Type 3271 or Type 3277 Pneumatic Actuator, the control valve moves to a certain fail-safe position upon supply air or control signal failure (see Chapter 3.1). The fail-safe action of the actuator is the same as its direction of action and is specified on the nameplate of SAMSON actuators.

### Warning against residual hazards

To avoid personal injury or property damage, plant operators and operating personnel must prevent hazards that could be caused in the control valve by the process medium, the operating pressure, the signal pressure or by moving parts by taking appropriate precautions. Plant operators and operating personnel must observe all hazard statements, warning and caution notes in these mounting and operating instructions.

Hazards resulting from the special working conditions at the installation site of the valve must be identified in a risk assessment and prevented through the corresponding standard operating procedures drawn up by the operator.

### Responsibilities of the operator

Operators are responsible for proper use and compliance with the safety regulations. Operators are obliged to provide these mounting and operating instructions as well as the referenced documents to the operating personnel and to instruct them in proper operation. Furthermore, operators must ensure that operating personnel or third parties are not exposed to any danger.

Operators are additionally responsible for ensuring that the limits for the product defined in the technical data are observed. This also applies to the start-up and shutdown procedures. Start-up and shutdown procedures fall within the scope of the operator's duties and, as such, are not part of these mounting and operating instructions. SAMSON is unable to make any statements about these procedures since the operative details (e.g. differential pressures and temperatures) vary in each individual case and are only known to the operator.

### Responsibilities of operating personnel

Operating personnel must read and understand these mounting and operating instructions as well as the referenced documents and observe the specified hazard statements, warnings and caution notes. Furthermore, operating personnel must be familiar with the applicable health, safety and accident prevention regulations and comply with them.

### Referenced standards, directives and regulations

The control valves comply with the requirements of the European Pressure Equipment Directive 2014/68/EU and the European Machinery Directive 2006/42/EC. Valves with a CE marking have a declaration of conformity, which includes information about the applied conformity assessment procedure. Chapter 14 contains this declaration of conformity.

Non-electric valve versions whose bodies are not lined with an insulating material coating do not have their own potential ignition source according to the risk assessment stipulated in Clause 5.2 of DIN EN ISO 80079-36, even in the rare incident of an operating fault. Therefore, such valve versions do not fall within the scope of ATEX Directive 2014/34/EU.

⇒ For connection to the equipotential bonding system, observe the requirements specified in Clause 6.4 of DIN EN 60079-14 (VDE 0165-1).

### Referenced documents

The following documents apply in addition to these mounting and operating instructions:

- Mounting and operating instructions for mounted valve accessories (positioner, solenoid valve etc.)
- Mounting and operating instructions for the mounted actuator, for example:
  - ► EB 8310-X for Type 3271 and Type 3277 Pneumatic Actuators
- ► AB 0100 for tools, tightening torques and lubricants
- Manual ► H 02: Appropriate Machinery Components for SAMSON Pneumatic Control Valves with a Declaration of Conformity of Final Machinery
- For oxygen service: Manual ► H 01  
The packaging of valve constructed and sized for oxygen service has the following label on it:



**Note!** No oxygen service with Type 3251-AM Valve (see section 'Intended use' in this chapter).

- Information Sheet ► T 8000-2 for the pressure and temperature ranges possible for the valve materials used
- Special mounting and operating instructions are available for the Type 3251 Globe Valve for molten salt service ► EB 8052-1.

**Note!** No molten salt service with Type 3251-AM Valve (see section 'Intended use' in this chapter).

- If a device contains a substance listed as a substance of very high concern (SVHC) on the candidate list of the REACH regulation, the document "Additional Information on Your Inquiry/Order" is added to the SAMSON order documents. This document includes the SCIP number assigned to the devices concerned. This number can be entered into the database on the European Chemicals Agency (ECHA) website (► <https://www.echa.europa.eu/scip-database>) to find out more information on the SVHC contained in the device.  
More information on material compliance at SAMSON can be found at ► [www.samsongroup.com](http://www.samsongroup.com) > About SAMSON > Environment, Social & Governance > Material Compliance

## 1.1 Notes on possible severe personal injury

### DANGER

#### Risk of bursting in pressure equipment.

Control valves and pipelines are pressure equipment. Excessive pressurization or improper opening can lead to valve components bursting.

- ⇒ Observe the maximum permissible pressure for valve and plant.
- ⇒ Before starting any work on pressure-bearing or pressure-retaining parts belonging to the valve assembly, depressurize all plant sections affected as well as the valve.
- ⇒ Drain the process medium from the plant sections affected as well as from the valve.

### DANGER

#### Risk of injury due to incorrect handling of oxygen or cryogenic gases in applications.

The valve can be used for oxygen service or applications with cryogenic gases. Oxygen is a hazardous substance, which reacts quickly, leading to combustion and explosions. Contact with cryogenic gases

causes severe frostbite and cold burns (cryogenic burns). Operating personnel must be trained for these applications. Unqualified operating personnel expose themselves and others to an increased risk of injury.

- ⇒ Operating personnel must be sufficiently trained and be made aware of the hazards in applications involving oxygen or cryogenic gases.
- ⇒ Instructions and information on how to safely handle devices for oxygen service can be found in the Manual ► H 01.

## 1.2 Notes on possible personal injury

### WARNING

#### Risk of burn injuries due to cold components and pipelines.

Depending on the process medium, valve components and pipelines may get extremely cold and cause cryogenic burns.

- ⇒ Follow the standard operating procedures provided by the plant operator.
- In the event of a potential risk:
- ⇒ Allow components and pipelines to reach ambient temperature.
  - ⇒ Wear protective clothing and safety gloves.

### WARNING

#### Risk of hearing loss or deafness due to loud noise.

Noise emission (e.g. cavitation or flashing) may occur during operation caused by the process medium and the operating conditions. Additionally, a loud noise may briefly occur through the sudden venting of the pneumatic actuator or pneumatic valve accessories not fitted with noise-reducing elements. Both can damage hearing.

- ⇒ Follow the standard operating procedures provided by the plant operator.
- In the event of a potential risk:
- ⇒ Wear hearing protection when working near the valve.

### **⚠ WARNING**

#### **Risk of personal injury due to exhaust air being vented or compressed air escaping from pneumatically operated components.**

When the valve is operated with a pneumatic actuator or pneumatic valve accessories, exhaust air is vented from the actuator, for example, while the valve is operating and when the valve opens or closes.

- ⇒ Install the control valve in such a way that vent openings are not located at eye level and the actuator does not vent at eye level in the work position.
- ⇒ Use suitable mufflers and vent plugs.
- ⇒ Wear eye protection when working in close proximity to pneumatic fittings and in the danger zone of the vent openings.

### **⚠ WARNING**

#### **Crush hazard arising from moving parts.**

The control valve contains moving parts (actuator and plug stem), which can injure hands or fingers if inserted into the valve.

- ⇒ Do not insert hands or finger into the yoke while the air supply is connected to the actuator.
- ⇒ Before working on the pneumatic control valve, disconnect and lock the pneumatic air supply as well as the control signal.
- ⇒ Do not impede the movement of the actuator and plug stem by inserting objects into the yoke.
- ⇒ Before unblocking the actuator and plug stem after they have become blocked (e.g. due to seizing up after remaining in the same position for a long time), release any stored energy in the actuator (e.g. spring compression). See associated actuator documentation.

### **⚠ WARNING**

#### **Risk of personal injury due to preloaded springs in pneumatic actuators.**

Valves in combination with pneumatic actuators with preloaded springs are under tension. These control valves with SAMSON Type 3271 or Type 3277 Pneumatic Actuators can be identified

by the long bolts protruding from the bottom of the actuator.

- ⇒ Before starting any work on the actuator, which requires the actuator to be opened, or when the actuator stem has become blocked, relieve the compression from the preloaded springs (see associated actuator documentation).

### **⚠ WARNING**

#### **Risk of personal injury due to incorrect removal of the anti-rotation fixture under tension.**

Once the actuator has been mounted on the valve and the assembly is ready for use, the clamps of the anti-rotation fixture on the plug stem are under tension.

- ⇒ Follow the instructions in this document during mounting or removal.
- ⇒ Remove the actuator from the valve or otherwise ensure that it cannot transmit any forces to the actuator stem before removing the anti-rotation fixture from the plug stem.

### **⚠ WARNING**

#### **Risk of personal injury due to pressurized components and as a result of process medium being discharged.**

Valves with a bellows seal have a test connection at the top on the intermediate piece.

- ⇒ Do not loosen the screw on the test connection while the valve is pressurized.

### **⚠ WARNING**

#### **Risk of personal injury due to residual process medium in the valve.**

While working on the valve, residual medium can flow out of the valve and, depending on its properties, cause personal injury, e.g. (chemical) burns.

- ⇒ Follow the standard operating procedures provided by the plant operator.

In the event of a potential risk:

- ⇒ If possible, drain the process medium from the plant sections affected and from the valve.
- ⇒ Wear protective clothing, safety gloves, respiratory protection and eye protection.

**⚠ WARNING**

**Risk of personal injury due to incorrect operation, use or installation as a result of information on the control valve being illegible.**

Over time, markings, labels and nameplates on the control valve may become covered with dirt or become illegible in some other way. As a result, hazards may go unnoticed and the necessary instructions not followed. There is a risk of personal injury.

- ⇒ Keep all relevant markings and inscriptions on the device in a constantly legible state.
- ⇒ Immediately renew damaged, missing or incorrect nameplates or labels.

**⚠ WARNING**

**Exposure to hazardous substances poses a serious risk to health.**

Certain lubricants and cleaning agents are classified as hazardous substances. These substances have a special label and a material safety data sheet (MSDS) issued by the manufacturer.

- ⇒ Make sure that an MSDS is available for any hazardous substance used. If necessary, contact the manufacturer to obtain an MSDS.
- ⇒ Inform yourself about the hazardous substances and their correct handling.

### 1.3 Notes on possible property damage

**ⓘ NOTICE**

**Risk of valve damage due to contamination (e.g. solid particles) in the pipeline.**

The plant operator is responsible for cleaning the pipelines in the plant.

- ⇒ Flush the pipelines before start-up.

**ⓘ NOTICE**

**Risk of valve damage due to unsuitable medium properties.**

The valve is designed for a process medium with defined properties.

- ⇒ Only use the process medium specified for sizing the equipment.

**ⓘ NOTICE**

**Risk of leakage and valve damage due to over- or under-torquing.**

Observe the specified torques when tightening control valve components. Over-torquing leads to parts wearing out more quickly. Under-torquing may cause leakage.

- ⇒ Observe the tightening torques specified in  
▶ AB 0100.

**ⓘ NOTICE**

**Risk of valve damage due to the use of unsuitable tools.**

Certain tools are required to work on the valve.

- ⇒ Only use tools approved by SAMSON  
(▶ AB 0100).

**ⓘ NOTICE**

**Risk of valve damage due to the use of unsuitable lubricants.**

The lubricants to be used depend on the valve material. Unsuitable lubricants may corrode and damage surfaces.

- ⇒ Only use lubricants approved by SAMSON  
(▶ AB 0100).

**ⓘ NOTICE**

**Risk of the process medium being contaminated through the use of unsuitable lubricants and/or contaminated tools and components.**

- ⇒ If necessary (e.g. for oxygen service), keep the valve and the tools used free from solvents and grease.
- ⇒ Make sure that only suitable lubricants are used.

**ⓘ NOTICE**

**Risk of valve damage due to work being carried out by personnel not qualified for such tasks.**

The plant operator or specialist company performing the welding is responsible for the selection of the welding procedure and the actual welding operations on the valve. This also applies to any re-

## Safety instructions and measures

quired heat treatment to be performed on the valve.


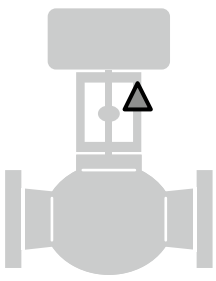
- ⇒ Only allow qualified welding personnel to carry out welding operations.
- ⇒ Before welding painted valves into the pipeline and/or subject them to heat in any way, observe the temperature resistance of the paint coating system. The number of the coating system used can be found in the order documentation. The temperature resistance of all of our coating systems is specified in the Brochure ► WA 268.

### 1.4 Notes on the use of an RFID tag

The RFID tag is subject to certain restrictions due to its application range (technical specifications).

- ⇒ Observe the explosion protection certificates of the RFID tag when it is to be used on valves installed in potentially explosive atmospheres.
- ⇒ Do not expose the RFID tag to strong electric fields.
- ⇒ Avoid electrostatic charging.
- ⇒ Observe the application range (technical specifications) of the RFID tag.

### 1.5 Warnings on the device

Warning symbols	Location on the device
	
Meaning of the warning	
<b>Warning against moving parts</b> There is a risk of injury to hands or fingers due to the stroking movement of the actuator and plug stem if they are inserted into the yoke while the air supply is connected to the actuator.	



## 2 Markings on the device

### 2.1 Valve nameplate

The nameplate shown was up to date at the time of publication of this document. The nameplate on the device may differ from the one shown.

The nameplate is affixed to the yoke of the valve.

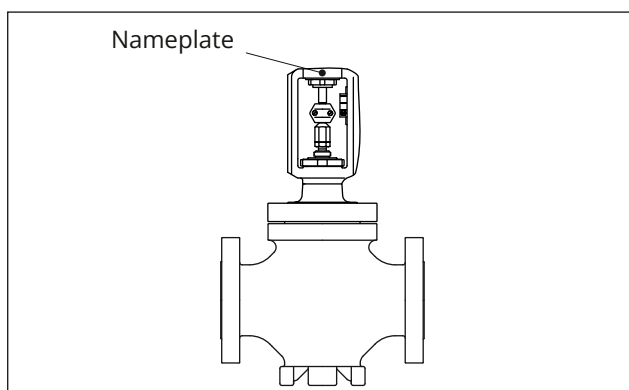


Fig. 1: Valve nameplate (example shown)

#### a) Nameplate of Type 3251

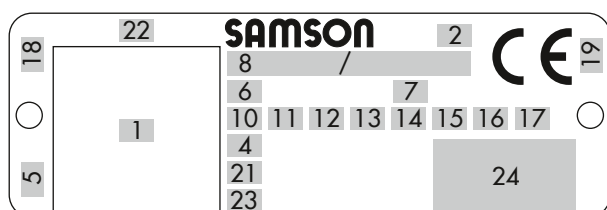


Fig. 2: Inscriptions on the valve nameplate

#### b) Nameplate of Type 3251-AM

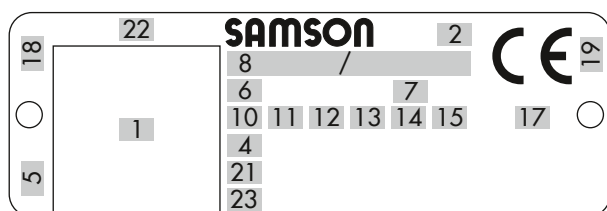


Fig. 3: Inscriptions on the nameplate of Type 3251-AM Valve

Item	Inscription meaning
1	Identification code (scannable)
2	Type designation
4	Material
5	Month and year of manufacture
6	Nominal size: DIN: <b>DN</b> · ANSI: <b>NPS</b> · JIS: <b>DN</b>
7	Pressure rating: DIN: <b>PN</b> · ANSI: <b>CL</b> · JIS: <b>K</b>

Item	Inscription meaning
8	Order number/item
10	Flow coefficient: DIN: <b>KV</b> · ANSI/JIS: <b>CV</b>
11	Characteristic: <b>%</b> : Equal percentage <b>LIN</b> : Linear <b>mod-lin</b> : Modified linear <b>NO/NC</b> : On/off service
12	Seat-plug seal: <b>ME</b> : Metal <b>HA</b> : Carbide metal <b>ST</b> : Metal base material with Stellite® facing <b>KE</b> : Ceramic <b>PT</b> : PTFE soft seal <b>PK</b> : PEEK soft seal
13	Seat code (trim material): On request
14	Pressure balancing: <b>D</b> : DIN · <b>B</b> : ANSI/JIS
	Version: <b>M</b> : Mixing valve <b>V</b> : Diverting valve
15	Noise reduction: <b>1</b> : Flow divider (ST) 1 <b>2</b> : ST 2 <b>3</b> : ST 3 <b>1/PSA</b> : ST 1 standard and integrated in seat for PSA valve <b>AC-1/AC-2/AC-3/AC-5</b> : Anti-cavitation trim, versions 1 to 5 <b>LK</b> : Perforated plug <b>LK1/LK2/LK3</b> : Perforated plug with flow divider <b>ST 1 to 3</b> <b>MHC1</b> : Multi-Hole Cage <b>CC1</b> : Combi Cage <b>ZT1</b> : Zero Travel <b>LDB</b> : Low dB <b>CDST</b> : Multi-stage trim (cavitation dirty service trim)
16	PSA version: <b>PSA</b>
17	Cage/seat style: <b>RT</b> : Seat with retainer <b>CG</b> : Guided cage <b>TH</b> : Screwed-in seat <b>SF</b> : Suspended cage, flanged seat
18	Country of origin
19	ID of the notified body (EU), for example: – <b>0062</b> for Bureau Veritas Services SAS, 8 Cours du Triangle, 92800 PUTEAUX – LA DEFENSE

Item	Inscription meaning
21	<b>PED:</b> Pressure Equipment Directive <b>G1/G2:</b> Gases and vapors Fluid group 1 = Hazardous Fluid group 2 = Other <b>L1:</b> Liquids Fluid group 1 = Hazardous Fluid group 2 = Other <b>I/II/III:</b> Category 1 to 3
22	Serial number
23	NE 53 (NAMUR Recommendation)
24	Other marks of conformity

### **i Note**

Fig. 2, Fig. 3 and the inscription table list all possible characteristics and options that may appear on a valve nameplate. Only the inscriptions relevant to the ordered Type 3251 or Type 3251-AM Valve actually appear on the nameplate.

### **Tip**

SAMSON recommends to include the device's serial number (item 22 on the nameplate) and/or its material number (as specified in the order confirmation) in the plant documentation for the associated tag number.

The serial number enables you to view the device's current technical data as configured by SAMSON. The material number enables you to view the device's technical data as configured by SAMSON upon delivery of the device. To view these data, go to our website at:

► [www.samsongroup.com](http://www.samsongroup.com) > Products > Electronic nameplate

For example, you can also use the associated information to order a new nameplate from our after-sales service, if required.

## 2.2 Actuator nameplate

See associated actuator documentation.

## 2.3 Material numbers

The seat and plug of the valves have an item number written on them. You can contact us stating this item number to find out which material is used. Additionally, a seat code is used to identify the trim material. This seat code is specified on the nameplate.

## 2.4 Label when an adjustable packing is installed

An instructional label is affixed to the valve when an adjustable packing is installed (see Fig. 4).



**Fig. 4:** Label when an adjustable packing is installed

## 2.5 Optional RFID tag

The RFID tag is located directly next to the nameplate on valves ordered with the RFID tag option. It contains the same data as the identification code on the electronic nameplate. It can be read using a smartphone, tablet or RFID reader. Application range according to the technical data (see Chapter 3.5).



### 3 Design and principle of operation

The Type 3251/3251-AM Valve is a single-seated globe valve. This valve is preferably combined with a SAMSON Type 3271 or Type 3277 Pneumatic Actuator. It can also be combined with other actuators.


The seat (4) and plug with plug stem (5) are installed in the body (1). In some versions, the seat is already integrated into the body. The plug stem is connected to the actuator stem (A7) by the stem connector clamps (A26) and is sealed by a spring-loaded V-ring packing (15).

The springs in the pneumatic actuator are located either above or below the diaphragm depending on the selected fail-safe action (see Chapter 3.1). A change in the signal pressure acting on the diaphragm causes the plug to move. The actuator size is determined by the diaphragm area.

The medium flows through the valve in the direction indicated by the arrow. A rise in signal pressure causes the force acting on the diaphragm in the actuator to increase. The springs are compressed. Depending on the selected direction of action, the actuator stem retracts or extends. As a result, the plug position in the seat changes and determines the flow rate through the valve and the pressure  $p_2$  as well.



*SAMSON recommends the use of positioners with integrated diagnostic firmware (see Chapter 3.4) for control valves used for on/off service. The partial stroke test included in this software helps prevent a shut-off valve normally in its end position from seizing up or getting jammed.*

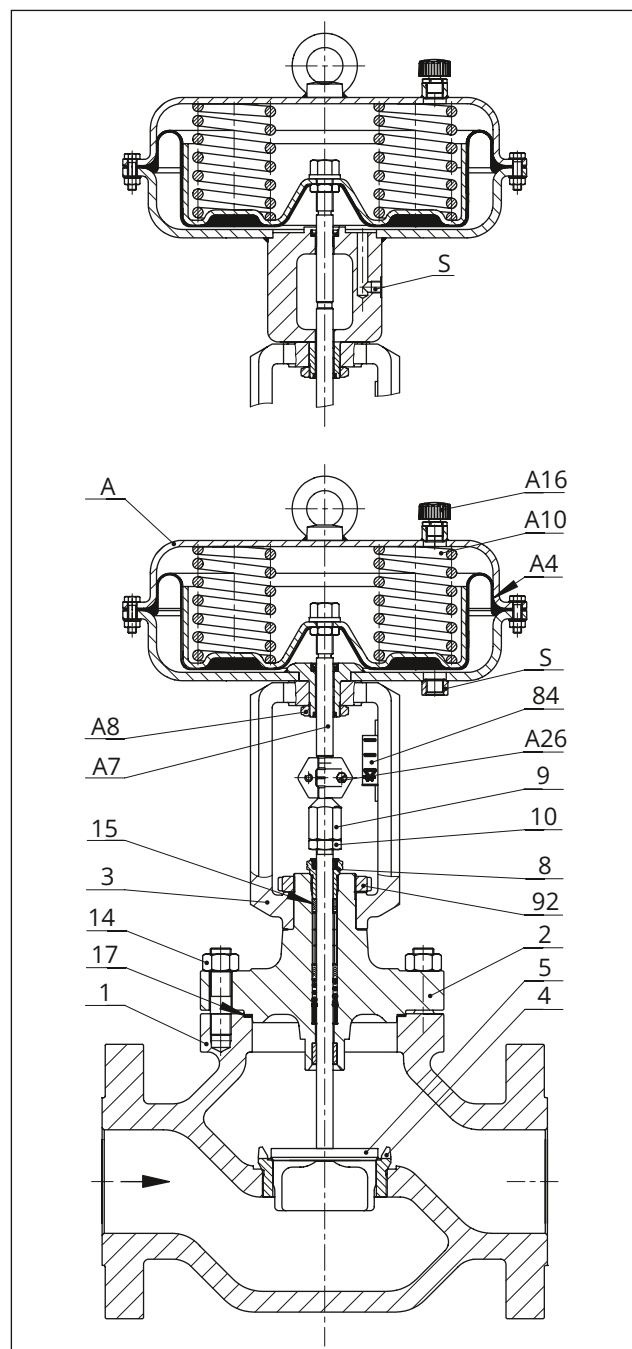

**Fig. 5:** Type 3251/3251-AM Valve with Type 3271 Pneumatic Actuator (bottom) or Type 3277 Pneumatic Actuator (top)

- |    |                                   |     |                            |
|----|-----------------------------------|-----|----------------------------|
| 1  | Body                              | 84  | Travel indicator scale     |
| 2  | Bonnet                            | 92  | Castellated nut            |
| 3  | Yoke                              | A   | Actuator                   |
| 4  | Seat                              | A4  | Diaphragm                  |
| 5  | Plug (with plug stem)             | A7  | Actuator stem              |
| 8  | Threaded bushing<br>(packing nut) | A8  | Ring nut                   |
| 9  | Stem connector nut                | A10 | Spring                     |
| 10 | Lock nut                          | A16 | Vent plug                  |
| 14 | Nut                               | A26 | Stem connector clamps      |
| 15 | Packing set                       | 5   | Signal pressure connection |
| 17 | Body gasket                       |     |                            |

### 3.1 Fail-safe positions

The fail-safe position of the control valve upon air supply or control signal failure depends on the actuator used (see associated actuator documentation).

Depending on how the compression springs are arranged in the SAMSON Type 3271 and Type 3277 Pneumatic Actuator, the control valve has one of two different fail-safe positions:

- **Actuator stem extends (FA)**  
When the signal pressure is reduced or the air supply fails, the springs move the actuator stem downward and close the valve. The valve opens when the signal pressure is increased enough to overcome the force exerted by the springs.
- **Actuator stem retracts (FE)**  
When the signal pressure is reduced or the air supply fails, the springs move the actuator stem upward and open the valve. The valve closes when the signal pressure is increased enough to overcome the force exerted by the springs.

---

#### Tip

*The actuator's direction of action can be reversed, if required. Refer to the mounting and operating instructions of the pneumatic actuator: ► EB 8310-X for Type 3271 and Type 3277*

---

### 3.2 Versions

#### With insulating section/bellows seal

The modular design allows an insulating section or bellows seal to be fitted to the standard valve version.

#### Actuators

In these instructions, the preferable combination with a SAMSON Type 3271 or Type 3277 Pneumatic Actuator is described. The pneumatic actuator (with or without handwheel) can be replaced by another pneumatic actuator in a different size, but with the same travel.

- ⇒ Observe the maximum permissible actuator force.

---

#### **i** Note

*If the travel range of the actuator is larger than the travel range of the valve, the spring assembly in the actuator must be preloaded so that the travel ranges match (see associated actuator documentation).*

---

The basic pneumatic actuator can be replaced by an actuator with additional handwheel, a pneumatic piston actuator or an electric actuator (see Information Sheet ► T 8300).

### 3.3 Additional fittings

#### Strainer

SAMSON recommends installing a SAMSON strainer upstream of the valve. It prevents solid particles in the process medium from damaging the control valve.

#### Bypass and shut-off valves

SAMSON recommends installing a shut-off valve both upstream of the strainer and downstream of the control valve and installing a bypass line. The bypass ensures that the plant does not need to be shut down for service and repair work on the valve.

#### Insulation

Control valves can be insulated to reduce heat energy transfer.

If applicable, read the instructions in Chapter 5.

#### Test connection

Versions with bellows seal fitted with a test connection (G 1/8) at the top of the intermediate piece allow the sealing ability of the bellows to be monitored.

Particularly for liquids and vapors, SAMSON recommends installing a suitable leakage indicator (e.g. a contact pressure gauge, an outlet to an open vessel or an inspection glass).

#### Safety guard

For operating conditions that require increased safety (e.g. in cases where the control valve is freely accessible to untrained staff), a safety guard must be installed to rule out a crush hazard arising from moving parts (actuator and plug stem). Plant operators are responsible for deciding whether a guard is to be used. The decision is based on the risk posed by the plant and its operating conditions.

### Noise reduction

Trims with flow dividers can be used to reduce noise emission (► T 8081).

## 3.4 Valve accessories

See Information Sheet ► T 8350

## 3.5 Technical data

The nameplates on the valve and actuator provide information on the control valve version (see Chapter 2).

---

### **i Note**

*More information on Type 3251/Type 3251-AM Valve is available in the following data sheets:*

- ► T 8051 (DIN version)
- ► T 8052 (ANSI version)

---

### Noise emissions

SAMSON is unable to make general statements about noise emissions. The noise emissions depend on the valve version, plant facilities and process medium.

### Optional RFID tag

Application range according to the technical specifications and the explosion protection certificates. These documents are available on our website:

► [www.samsongroup.com](http://www.samsongroup.com) > Products > Electronic nameplate

The maximum permissible temperature at the RFID tag is 185 °F (85 °C).

**Table 1:** Technical data for Type 3251/3251-AM

Valve type			3251			3251-AM
Material			Cast steel A216 WCC	Cast steel A217 WC6	Cast stainless steel A351 CF8M	AM stain- less steel 316/316L
Nominal size and pressure rating			NPS ½ to 12 in Class 150 to 2500 NPS 14 in Class 150 to 600 NPS 16 to 20 in Class 150 to 1500			NPS ½ to 3 in Class 150 to 2500
Type of end connections	Flanges		All ANSI versions			
	Welding ends		According to ASME B16.25			
Seat-plug seal			Metal seal · Soft seal · High-performance metal seal			
Characteristic			Equal percentage · Linear · On/off ► T 8000-3)			
Rangeability			50:1			
Conformity			CE			CE
Temperature ranges in °F (°C) · Permissible operating pressures according to pressure-temperature diagram (see Information Sheet ► T 8000-2)						
Body with standard bonnet			14 to 428 (-10 to +220) · Up to 662 (350) with high-temperature packing			
Body with insulating section or bellows seal			-20 to +800 (-29 to +425)	-20 to +932 (-29 to +500)	-325 to +1022 (-196 to +550) <sup>2)</sup>	-325 to +842 (-196 to +450) <sup>2)</sup>
Valve plug <sup>1)</sup>	Standard	Metal seal	-325 to +1022 (-196 to +550) <sup>2)</sup>			-325 to +842 (-196 to +450) <sup>2)</sup>
		Soft seal	-325 to +428 (-196 to +220) <sup>2)</sup>			-325 to +428 (-196 to +220) <sup>2)</sup>
	Balanced with PTFE ring		-58 to +428 (-50 to +220) <sup>3)</sup>			-58 to +428 (-50 to +220) <sup>2)</sup>
	Balanced with graphite ring		428 to 932 (220 to 500) <sup>4)</sup>			428 to 842 (220 to 450)
	Leakage class according to ANSI FCI 70-2					
Valve plug	Standard	Metal seal	Standard: IV · High-performance metal seal: V			
		Soft seal	VI			
	Balanced, metal seal		With PTFE ring (standard): IV · High-performance metal seal: V · With graphite ring: IV			

<sup>1)</sup> Only in combination with suitable body material

<sup>2)</sup> Note: The temperature limits are not directly converted temperatures.


<sup>3)</sup> Lower temperatures on request

<sup>4)</sup> Higher temperatures on request

**Note:** The temperature limits for DIN and ANSI versions are not directly converted temperatures.

## Dimensions

Specifications in inches and mm

 = Versions available for Type 3251-AM (restricted range for Type 3251-AM)

**Table 2:** Type 3251/3251-AM Valve · Face-to face dimensions according to ANSI/ISA 75.08.01 for up to ≤Class 600 and according to ASME B16.10 for ≥Class 900 and higher

Valve	NPS		½	1	1½	2	3	4	6	8	10	12	14	16	20
	DN		15	20	40	50	80	100	150	200	250	300	-	400	500
Length L (flanges RF and welding ends)	Class 150	in	7.25	7.25	8.75	10.00	11.75	13.88	17.75	21.38	26.50	29.00	35.00	40.00	On req.
		mm	184	184	222	254	298	352	451	543	673	737	889	1016	On req.
	Class 300	in	7.50	7.75	9.25	10.50	12.50	14.50	18.62	22.38	27.88	30.50	36.50	41.62	On req.
		mm	190	197	235	267	318	368	473	568	708	775	927	1057	On req.
	Class 600	in	8.00	8.25	9.88	11.25	13.25	15.50	20.00	24.00	29.62	32.25	38.25	43.62	On req.
		mm	203	210	251	286	337	394	508	610	752	819	972	1108	On req.
	Class 900	in	8.50	10.00	12.00	14.50	15.00	18.00	24.00	29.00	33.00	38.00	-	On req.	On req.
		mm	216	254	305	368	381	457	610	737	838	965	-	On req.	On req.
	Class 1500	in	8.50	10.00	12.00	14.50	18.50	21.61	27.75	32.75	39.00	44.50	-	On req.	On req.
		mm	216	254	305	368	470	549	705	832	991	1130	-	On req.	On req.
	Class 2500	in	10.38	12.12	15.12	17.75	22.75	26.50	36.00	40.25	On req.	On req.	-	-	-
		mm	264	308	384	451	578	673	914	1022	On req.	On req.	-	-	-

## Design and principle of operation

Valve	NPS		½	1	1½	2	3	4	6	8	10	12	14	16	20
	DN		15	20	40	50	80	100	150	200	250	300	-	400	500
H8 for actuator	350 cm²	in	9.45	9.45	9.45	9.45	9.45	9.45	-	-	-	-	-	-	-
		mm	240	240	240	240	240	240	-	-	-	-	-	-	-
	350v2 cm²	in	9.45	9.45	9.45	9.45	9.45	9.45	-	-	-	-	-	-	-
		mm	240	240	240	240	240	240	-	-	-	-	-	-	-
	355v2 cm²	in	9.45	9.45	9.45	9.45	9.45	9.45	16.46	-	-	-	-	-	-
		mm	240	240	240	240	240	240	418	-	-	-	-	-	-
	750v2 cm²	in	9.45	9.45	9.45	9.45	9.45	9.45	16.46	16.46	16.46	-	-	-	-
		mm	240	240	240	240	240	240	418	418	418	-	-	-	-
	1000 cm²	in	-	-	-	11.61	11.61	11.61	16.46	16.46	On req.	On req.	On req.	On req.	On req.
		mm	-	-	-	295	295	295	418	418	On req.	On req.	On req.	On req.	On req.
	1400-60 cm²	in	-	-	-	11.61	11.61	11.61	16.46	16.46	On req.	On req.	On req.	On req.	On req.
		mm	-	-	-	295	295	295	418	418	On req.	On req.	On req.	On req.	On req.
	1400-120 cm²	in	-	-	-	-	-	18.90	19.80	19.80	19.80	25.59	25.59	25.59	25.59
		mm	-	-	-	-	-	480	503	503	503 <sup>4)</sup>	650	650	650	650
	2800 cm²	in	-	-	-	-	-	18.90	19.80	19.80	19.80	25.59	25.59	25.59	25.59
		mm	-	-	-	-	-	480	503	503	503 <sup>4)</sup>	650	650	650	650
	2 x 2800 cm²	in	-	-	-	-	-	18.90	19.80	19.80	19.80	25.59	25.59	25.59	25.59
		mm	-	-	-	-	-	480	503	503	503 <sup>4)</sup>	650	650	650	650
H2 <sup>1)</sup> (approx.) (DN 100/ NPS 4 and larger with foot)	Class 150	in	1.97	2.36	3.05	3.54	3.94	6.3	8.66	9.06	12.21	14.57	15.16	16.34	On req.
		mm	50	60	80	90	100	160	220	230	310	370	385	415	On req.
	Class 300 to 600	in	2.36	2.76	3.54	3.94	3.94	7.09	9.25	10.63	11.82	15.35	On req.	On req.	On req.
		mm	60	70	90	100	100	180	235	270	300	390	On req.	On req.	On req.
	Class 900	in	2.76	3.05	3.94	4.33	4.72	7.09	9.25	On req.	On req.	On req.	-	On req.	On req.
		mm	70	80	100	110	120	180	235	On req.	On req.	On req.	-	On req.	On req.
	Class 1500	in	2.76	3.05	3.94	4.33	5.51	8.66	11.22	On req.	On req.	On req.	-	On req.	On req.
		mm	70	80	100	110	140	220	285	On req.	On req.	On req.	-	On req.	On req.
	Class 2500	in	2.95	3.54	4.33	4.72	6.3	9.33	12.6	On req.	On req.	On req.	-	On req.	On req.
		mm	75	90	110	120	160	237	320	On req.	On req.	On req.	-	On req.	On req.

Valve	NPS		½	1	1½	2	3	4	6	8	10	12	14	16	20
	DN		15	20	40	50	80	100	150	200	250	300	-	400	500
With standard bonnet															
H4	Class 150 to 600	in	5.98	5.98	6.46	8.54	8.74	9.53	12.36	15.24	17.40 <sup>2)</sup>	25.79	25.20	25.20	On req.
		mm	152	152	164	217	222	242	314	387	442 <sup>2)</sup>	655	640	640	On req.
	Class 900	in	7.32	7.32	7.68	9.88	8.74	9.53	12.36	15.24	20.43 <sup>3)</sup>	23.90	-	On req.	On req.
		mm	186	186	195	251	222	242	314	387	519 <sup>3)</sup>	607	-	On req.	On req.
	Class 1500 to 2500	in	7.32	7.32	7.68	9.88	11.34	13.70	18.35	22.44	On req.	On req.	-	Class 1500 On req.	Class 1500 On req.
		mm	186	186	195	251	288	348	466	570	On req.	On req.	-	Class 1500 On req.	Class 1500 On req.
With insulating section															
H4	Class 150 to 600	in	13.90	13.90	14.37	19.17	19.37	20.16	26.18	37.28	42.01	45.32	On req.	44.76	On req.
		mm	353	353	365	487	492	512	665	947	1067	1151	On req.	1137	On req.
	Class 900	in	15.04	15.04	15.39	20.32	19.37	20.16	26.18	37.28	42.01	On req.	-	On req.	On req.
		mm	382	382	391	516	492	512	665	947	1067	On req.	-	On req.	On req.
	Class 1500 to 2500	in	15.04	15.04	15.39	20.32	21.50	23.54	31.10	42.13	On req.	On req.	-	Class 1500 On req.	Class 1500 On req.
		mm	382	382	391	516	546	598	790	1070	On req.	On req.	-	Class 1500 On req.	Class 1500 On req.

## Design and principle of operation

Valve	NPS		½	1	1½	2	3	4	6	8	10	12	14	16	20		
	DN		15	20	40	50	80	100	150	200	250	300	-	400	500		
With bellows seal																	
		Travel															
H4	Class 150	0.59 to 2.36	in	14.25	14.25	14.72	23.94	24.13	24.13	28.74	-	-	-	-	-	-	
		15 to 60	mm	362	362	374	608	613	613	730	-	-	-	-	-	-	
	Class 300 to 900	0.59 to 2.36	in	14.25	14.25	14.72	23.94	24.13	24.13	33.94	-	-	-	-	-	-	
		15 to 60	mm	362	362	374	608	613	613	862	-	-	-	-	-	-	
	Class 1500	0.59	in	24.92	24.92	25.0	33.58	33.58	On req.	On req.	-	-	-	-	-	-	
		15	mm	633	633	635	853	853	On req.	On req.	-	-	-	-	-	-	
		1.18	in	-	-	-	33.58	33.58	On req.	On req.	-	-	-	-	-	-	
		30	mm	-	-	-	853	853	On req.	On req.	-	-	-	-	-	-	
		2.36	in	-	-	-	-	-	-	On req.	-	-	-	-	-	-	
		60	mm	-	-	-	-	-	-	On req.	-	-	-	-	-	-	
		Class 2500	0.59	in	24.92	24.92	25.0	On req.	On req.	On req.	On req.	-	-	-	-	-	-
			15	mm	633	633	635	On req.	On req.	On req.	On req.	-	-	-	-	-	-
	1.18		in	-	-	-	On req.	On req.	On req.	On req.	-	-	-	-	-	-	
	30		mm	-	-	-	On req.	On req.	On req.	On req.	-	-	-	-	-	-	
	2.36		in	-	-	-	-	-	-	On req.	-	-	-	-	-	-	
	60		mm	-	-	-	-	-	-	On req.	-	-	-	-	-	-	
	Class 150 to 300	1.18 to 4.72	in	-	-	-	-	-	-	-	41.22	59.13	60.20	On req.	59.69	62.60	
		30 to 120	mm	-	-	-	-	-	-	-	1047	1502	1529	On req.	1516	1590	
	Class 600 to 900	1.18 to 2.36	in	-	-	-	-	-	-	-	62.24	62.68	64.96	-	On req.	On req.	
		30 to 60	mm	-	-	-	-	-	-	-	1581	1592	1650	-	On req.	On req.	
	Class 600	4.72	in	-	-	-	-	-	-	-	-	94.65	91.42	On req.	90.16	On req.	
		120	mm	-	-	-	-	-	-	-	-	2404	2322	On req.	2290	On req.	

<sup>1)</sup> The H2 dimension is the distance from the middle of the flow channel to the bottom of the valve body (DN 100/NPS 4 and larger: up to the bottom of the foot). The dimension up to the bottom of the flange may differ. It may be lower or higher. The dimension up to the bottom of the flange is determined based on the corresponding flange standard.


<sup>2)</sup> NPS 10, Class 150 to 300: 442 mm or 17.40"

<sup>3)</sup> NPS 10, Class 600 to 900: 519 mm or 20.43"


<sup>4)</sup> H8 = 650 mm with 250 mm seat bore




## Dimensional drawings

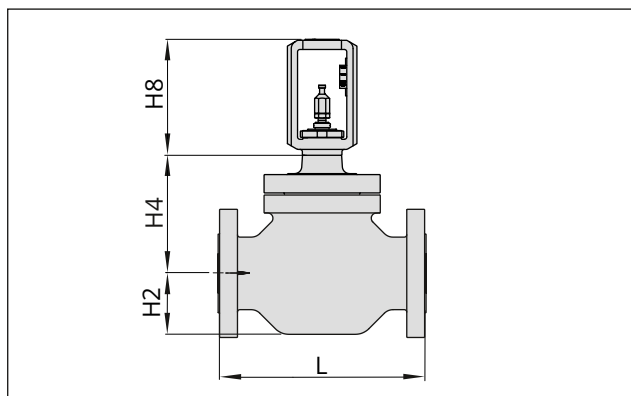


**Fig. 6:** Type 3251/3251-AM up to DN 80/NPS 3 without foot

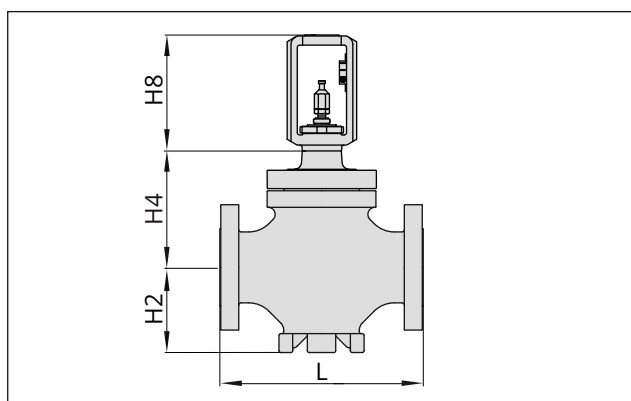

**Fig. 7:** Type 3251 in DN 100/NPS 4 and larger with foot

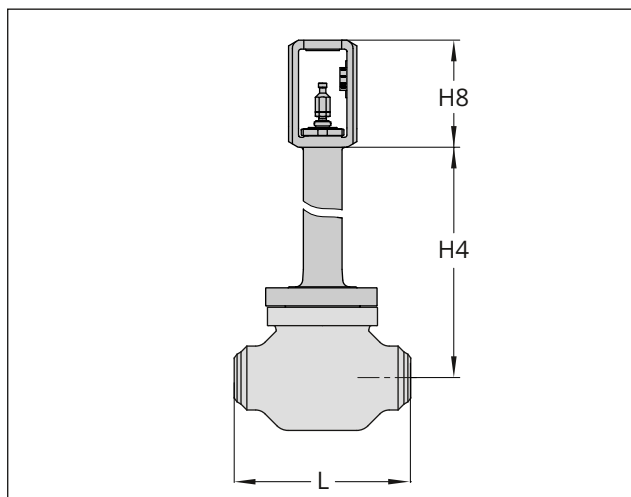

**Fig. 8:** Type 3251/3251-AM with bellows seal or insulating section

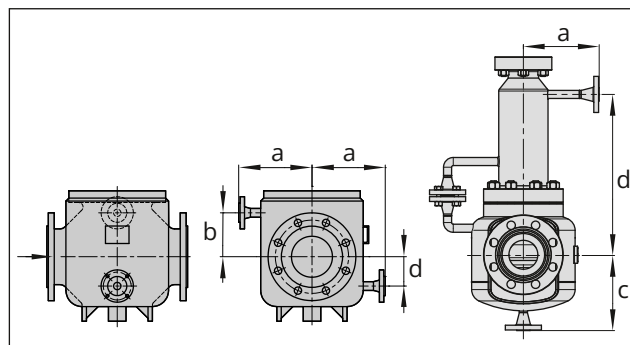


**Fig. 9:** Type 3251 with heating jacket · Dimensions on request

## Design and principle of operation

### Weights

Specifications in lbs and kg

 = Versions available for Type 3251-AM (restricted range for Type 3251-AM)

**Table 3:** Type 3251/3251-AM Valve

Valve	NPS		½	1	1½	2	3	4	6	8	10	12	14	16	20	
	DN	15	20	40	50	80	100	150	200	250	300	-	400	500		
With standard bonnet																
Weight <sup>1)</sup> , approx. Without actuator	Class 150	lbs	26	31	42	66	110	152	342	948	1892	2028	2965	3197	3638	
		kg	12	14	19	30	50	69	155	430	858	920	1345	1450	1650	
	Class 300	lbs	33	35	57	95	170	247	694	948	1892	2028	3010	3197	3638	
		kg	15	16	26	43	77	112	315	430	858	920	1365	1450	1650	
	Class 600	lbs	33	35	57	95	170	247	694	1096	1609	2535	On req.	On req.	On req.	
		kg	15	16	26	43	77	112	315	497	730	1150	On req.	On req.	On req.	
	Class 900	lbs	33	35	57	95	170	247	694	1157	2844	3263	-	5732	On req.	
		kg	15	16	26	43	77	112	315	525	1290	1480	-	2600	On req.	
	Class 1500	lbs	On req.	75	126	159	348	496	1235	1949	4630	On req.	-	On req.	On req.	
		kg	On req.	34	57	72	158	225	560	884	2100	On req.	-	On req.	On req.	
	Class 2500	lbs	On req.	93	163	238	379	604	2198	3990	On req.	On req.	-	-	-	
		kg	On req.	42	74	108	172	274	997	1810	On req.	On req.	-	-	-	
	With insulating section															
	Weight <sup>1)</sup> , approx. Without actuator	Class 150	lbs	35	40	51	79	130	172	412	1054	2046	2123	On req.	On req.	On req.
			kg	16	18	23	36	59	78	187	478	928	963	On req.	On req.	On req.
		Class 300	lbs	42	44	66	108	190	267	774	1054	2046	2123	On req.	On req.	On req.
kg			19	20	30	49	86	121	351	478	928	963	On req.	On req.	On req.	
Class 600		lbs	42	44	66	108	190	267	774	1191	2641	2635	On req.	On req.	On req.	
		kg	19	20	30	49	86	121	351	540	1198	1195	On req.	On req.	On req.	
Class 900		lbs	42	44	66	108	190	267	774	1254	2657	On req.	On req.	On req.	On req.	
		kg	19	20	30	49	86	121	351	569	1205	On req.	On req.	On req.	On req.	
Class 1500		lbs	On req.	79	130	172	375	545	1314	2094	On req.	On req.	-	On req.	On req.	
		kg	On req.	36	59	78	170	247	596	950	On req.	On req.	-	On req.	On req.	
Class 2500		lbs	On req.	97	168	247	401	653	2277	4090	On req.	On req.	-	-	-	
		kg	On req.	44	76	112	182	296	1033	1855	On req.	On req.	-	-	-	

Valve	NPS		½	1	1½	2	3	4	6	8	10	12	14	16	20
	DN		15	20	40	50	80	100	150	200	250	300	-	400	500
With bellows seal															
Weight <sup>1)</sup> , approx. Without actuator	Class 150	lbs	46	51	62	97	176	220	430	1146	2150	2227	On req.	On req.	On req.
		kg	21	23	28	44	80	100	195	520	975	1010	On req.	On req.	On req.
	Class 300	lbs	53	55	77	126	236	317	794	1146	2150	2227	On req.	On req.	On req.
		kg	24	25	35	57	107	144	360	520	975	1010	On req.	On req.	On req.
	Class 600	lbs	53	55	77	126	236	317	794	1312	2740	2734	On req.	On req.	On req.
		kg	24	25	35	57	107	144	360	595	1243	1240	On req.	On req.	On req.
	Class 900	lbs	53	55	77	126	236	317	794	1354	2866	On req.	-	On req.	On req.
		kg	24	25	35	57	107	144	360	614	1300	On req.	-	On req.	On req.
	Class 1500	lbs	On req.	93	174	On req.	414	606	1411	2216	On req.	On req.	-	On req.	On req.
		kg	On req.	42	79	On req.	188	275	640	1005	On req.	On req.	-	On req.	On req.
	Class 2500	lbs	On req.	106	201	273	507	714	2337	4222	On req.	On req.	-	-	-
		kg	On req.	48	91	124	230	324	1060	1915	On req.	On req.	-	-	-

<sup>1)</sup> The weights specified apply to a specific standard device configuration. Weights of other valve configurations may differ depending on the version (material, trim etc.).

### **i Note**

The associated actuator documentation applies to actuators, e.g. SAMSON pneumatic actuators:

- ► T 8310-1 for Type 3271 and Type 3277 Actuators up to 750 cm<sup>2</sup> actuator area
- ► T 8310-2 for Type 3271 Actuator with 1000 cm<sup>2</sup> actuator area and larger
- ► T 8310-3 for Type 3271 Actuator with 1400-60 cm<sup>2</sup> actuator area

### 4 Shipment and on-site transport

The work described in this chapter is to be performed only by personnel appropriately qualified to carry out such tasks.

#### 4.1 Accepting the delivered goods

After receiving the shipment, proceed as follows:

1. Check the scope of delivery. Check that the specifications on the valve nameplate match the specifications in the delivery note. See Chapter 2 for more details on the nameplate.
2. Check the shipment for transportation damage. Report any damage to SAMSON and the forwarding agent (refer to delivery note).
3. Determine the weight and dimensions of the units to be lifted and transported in order to select the appropriate lifting equipment and lifting accessories. Refer to the transport documents and Chapter 3.5.

#### 4.2 Removing the packaging from the valve

Observe the following sequence:

- ⇒ Do not open or remove the packaging until immediately before lifting the control valve to install it into the pipeline.
- ⇒ Leave the control valve in its transport container or on the pallet to transport it on site.
- ⇒ Do not remove the protective caps from the inlet and outlet until immediately before installing the valve into the pipeline. They prevent foreign particles from entering the valve.
- ⇒ Dispose and recycle the packaging in accordance with the local regulations.

#### 4.3 Transporting and lifting the valve

##### **⚠ DANGER**

***Danger due to suspended loads falling.***

- ⇒ Stay clear of suspended or moving loads.
- ⇒ Close off and secure the transport paths.

##### **⚠ WARNING**

***Risk of lifting equipment tipping over and risk of damage to lifting accessories due to exceeding the rated lifting capacity.***

- ⇒ Only use approved lifting equipment and accessories whose minimum lifting capacity is higher than the weight of the valve (including actuator and packaging, if applicable).

##### **⚠ WARNING**

***Risk of personal injury due to the control valve tipping over.***

- ⇒ Observe the control valve's center of gravity.
- ⇒ Secure the control valve against tipping over or turning.

##### **⚠ WARNING**

***Risk of injury due to incorrect lifting without the use of lifting equipment.***

*Lifting the control valve without the use of lifting equipment may lead to injuries (back injuries in particular) depending on its weight.*

- ⇒ Observe the occupational health and safety regulations valid in the country of use.

##### **ⓘ NOTICE**

***Risk of control valve damage due to incorrectly attached slings.***

*The lifting eyelet/eyebolt on SAMSON actuators is only intended for mounting and removing the actuator as well as lifting the actuator without valve. Do not use this lashing point to lift the entire control valve assembly.*

- ⇒ When lifting the control valve, make sure that the slings attached to the valve body bear the entire load.
- ⇒ Do not attach load-bearing slings to the actuator, handwheel or any other parts.
- ⇒ Observe lifting instructions (see Chapter 4.3.2).

**Tip**

A swivel hoist can be screwed into SAMSON actuators with a female thread on the top diaphragm case in place of the eyebolt (see associated actuator documentation).

In contrast to the lifting eyelet/eyebolt, the swivel hoist is designed for setting a control valve assembly up-right. The sling between the swivel hoist and rigging equipment (hook, shackle etc.) must not bear any load when lifting a control valve assembly. The sling only protects the control valve from tilting while being lifted.

**Tip**

Our after-sales service can provide more detailed transport and lifting instructions on request.

### 4.3.1 Transporting the valve

The control valve can be transported using lifting equipment (e.g. crane or forklift).


- ⇒ Leave the control valve in its transport container or on the pallet to transport it.
- ⇒ Observe the transport instructions.

#### Transport instructions


- Protect the control valve against external influences (e.g. impact).
- Do not damage the corrosion protection (paint, surface coatings). Repair any damage immediately.
- Protect the piping and any mounted valve accessories against damage.
- Protect the control valve against moisture and dirt.
- The permissible transportation temperature of standard control valves is -4 to +149 °F (-20 to +65 °C).

**Note**


Contact our after-sales service for the transportation temperatures of other valve versions.

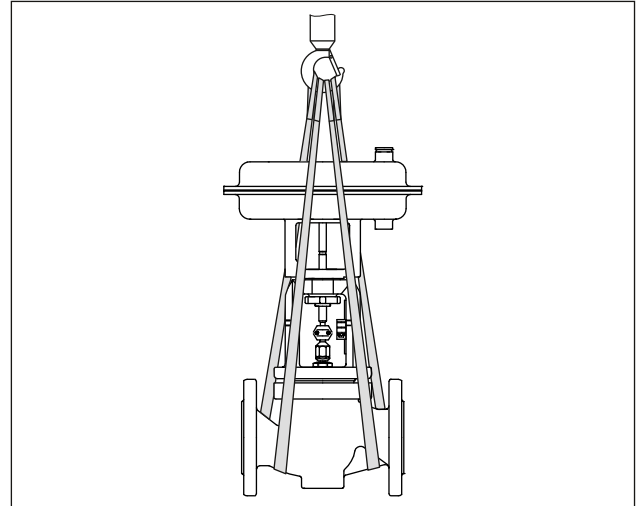

**Fig. 10:** Lifting points on the control valve without additional lashing point on the actuator

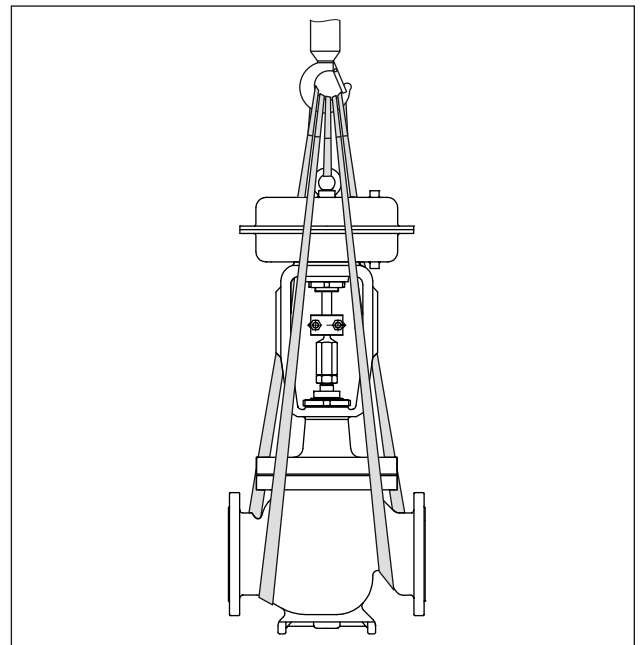

**Fig. 11:** Lifting points on the control valve with additional lashing point on the actuator

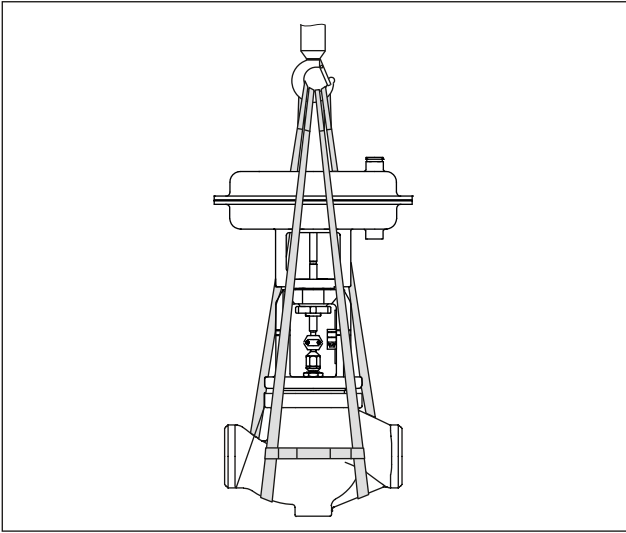

**Fig. 12:** *Lifting a control valve with welding ends (example shown): The attached slings are secured against slipping using a connector.*

### 4.3.2 Lifting the valve

See Fig. 10 to Fig. 12

To install a large control valve into the pipeline, use lifting equipment (e.g. crane or forklift) to lift it.

#### Lifting instructions

- Use a hook with safety latch to secure the slings from slipping off the hook during lifting and transporting.
- Secure slings against slipping.
- Make sure the slings can be removed from the device once it has been installed into the pipeline.
- Prevent the control valve from tilting or tipping over.
- Do not leave loads suspended when interrupting work for longer periods of time.
- Make sure that the axis of the pipeline is always horizontal during lifting and the axis of the plug stem is always vertical.
- Make sure that the additional sling between the lashing point on the actuator and rigging equipment (hook, shackle etc.) does not bear any load when lifting valves with an actuator that has a lifting eyelet/eyebolt on it. The sling only protects the control valve from tilting while being lifted. Before lifting the control valve, tighten the sling.

#### Version with flanges

1. Attach one sling to each flange of the body and to the rigging equipment (e.g. hook) of the crane or forklift.
2. **Mounted actuator with lashing point:** Attach other slings to the lashing point on the actuator and to the rigging equipment.
3. Carefully lift the control valve. Check whether the lifting equipment and accessories can bear the weight.
4. Move the control valve at an even pace to the site of installation.
5. Install the control valve into the pipeline (see Chapter 5).
6. After installation in the pipeline, check whether the flanges are bolted tight and the valve in the pipeline holds.
7. Remove slings.

#### Version with welding ends

1. Attach one sling to each welding end of the body and to the rigging equipment (e.g. hook) of the crane or forklift.
2. Secure the slings attached to the body against slipping using a connector.
3. **Mounted actuator with lashing point:** Attach other slings to the lashing point on the actuator and to the rigging equipment.
4. Carefully lift the control valve. Check whether the lifting equipment and accessories can bear the weight.
5. Move the control valve at an even pace to the site of installation.
6. Install the control valve into the pipeline (see Chapter 5).
7. After installation, check whether the weld seams hold.
8. Remove slings.

### 4.4 Storing the valve

#### NOTICE

##### **Risk of valve damage due to improper storage.**

- ⇒ Observe the storage instructions.
- ⇒ Avoid longer storage periods.
- ⇒ Contact SAMSON in case of different storage conditions or longer storage times.

---

**i Note**

*SAMSON recommends to regularly check the control valve and the prevailing storage conditions during long storage periods.*

---

**Storage instructions**

- Protect the control valve against external influences (e.g. impact).
- Secure the control valve assembly in the stored position against slipping or tipping over.
- Do not damage the corrosion protection (paint, surface coatings). Repair any damage immediately.
- Protect the control valve against moisture and dirt. Store it at a relative humidity of less than 75 %. In damp spaces, prevent condensation. If necessary, use a drying agent or heating.
- Make sure that the ambient air is free of acids or other corrosive media.
- The permissible storage temperature of standard control valves is -4 to +149 °F (-20 to +65 °C). Contact our after-sales service for the storage temperatures of other valve versions.
- Do not place any objects on the control valve.
- For storage periods longer than 4 months, SAMSON recommends storing the following valves upright with the actuator on top:
  - ≥NPS 4 in versions with pressure balancing
  - ≥NPS 6 in versions without pressure balancing

**Special storage instructions for elastomers**

Elastomer, e.g. actuator diaphragm

- To keep elastomers in shape and to prevent cracking, do not bend them or hang them up.
- SAMSON recommends a storage temperature of 59 °F (15 °C) for elastomers.
- Store elastomers away from lubricants, chemicals, solutions and fuels.

---

**💡 Tip**

*Our after-sales service can provide more detailed storage instructions on request.*

---

# 5 Installation

The work described in this chapter is to be performed only by personnel appropriately qualified to carry out such tasks.

## 5.1 Installation conditions

### Work position

The work position for the control valve is the front view looking onto the operating controls (including valve accessories).

Plant operators must ensure that, after installation of the device, the operating personnel can perform all necessary work safely and easily access the device from the work position.

### Pipeline routing


The inlet and outlet lengths (see Table 4) vary depending on several variables and process conditions and are intended as recommendations. Contact SAMSON if the lengths are significantly shorter than the recommended lengths.

To ensure that the control valve functions properly, proceed as follows:

- ⇒ Observe the recommended inlet and outlet lengths (see Table 4). Contact SAMSON if the valve conditions or state of the process medium are different from those specified.
- ⇒ Install the control valve free of stress and with the least amount of vibrations as possible. Read sections 'Mounting position' and 'Support and suspension' in this chapter.
- ⇒ Install the control valve allowing sufficient space to remove the actuator and valve or to perform service and repair work on them.



**Table 4:** Inlet and outlet lengths

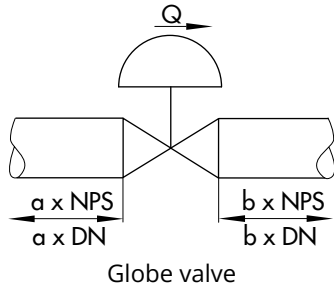	 <p style="text-align: center;">Globe valve</p>	<p>Q Flow rate a Inlet length b Outlet length</p>	
State of process medium	Valve conditions	Inlet length a	Outlet length b
Gases	$Ma \leq 0.3$	2	4
	$0.3 \leq Ma \leq 0.7$	2	10
Vapor	$Ma \leq 0.3$	2	4
	$0.3 \leq Ma \leq 0.7$	2	10
	Wet steam (percentage of condensate >5 %)	2	20
Liquids	Free of cavitation/ $w < 10$ m/s	2	4
	Cavitation producing noise/ $w \leq 3$ m/s	2	4
	Cavitation producing noise/ $3 < w < 5$ m/s	2	10
	Critical cavitation/ $w \leq 3$ m/s	2	10
	Critical cavitation/ $3 < w < 5$ m/s	2	20
Flashing	–	2	20
Multi-phase	–	10	20

### Mounting position

Generally, SAMSON recommends installing the valve with the actuator upright and on top of the valve.

In the following versions/applications, the valve **must** be installed with the actuator on top:

- Nominal sizes NPS 4 and larger
  - Valves with insulating section or bellows seal for low temperatures below 14 °F (-10 °C)
- ⇒ Contact SAMSON if the mounting position is not as specified above.

### Support and suspension

#### **i Note**

*The plant engineering company is responsible for selecting and implementing a suitable support or suspension of the installed control valve and the pipeline.*

Depending on the valve version and mounting position, the valve, actuator and pipeline must be supported or suspended.

Valves, which are not installed in the pipeline in the upright position with the actuator on top, must be supported or suspended.

### Valve accessories

- ⇒ During connection of valve accessories, make sure that they are easily accessible and can be operated safely from the work position.

### Vent plug

Vent plugs are screwed into the exhaust air ports of pneumatic and electropneumatic devices. They ensure that any exhaust air that forms can be vented to the atmosphere (to avoid excess pressure in the device). Furthermore, the vent plugs allow air intake to prevent a vacuum from forming in the device.

- ⇒ Locate the vent plug on the opposite side to the work position of operating personnel.

## 5.2 Preparation for installation

Before installation, make sure the following conditions are met:

- The valve is clean.
- The valve and all valve accessories (including piping) are not damaged.


## Installation

- The valve data on the nameplate (type designation, nominal size, material, pressure rating and temperature range) match the plant conditions (nominal size and pressure rating of the pipeline, medium temperature etc.). See Chapter 2 for more details on the nameplate.
- The requested or required additional pipe fittings (see Chapter 3.3) have been installed or prepared as necessary before installing the valve.

### NOTICE

#### **Risk of control valve damage due to incorrect insulation.**

- ⇒ Only insulate control valves up to the bonnet flange of the valve body (see Fig. 13). This also applies to versions with bellows seal or insulating section at medium temperatures below 32 °F (0 °C) or above 428 °F (220 °C). If the insulating section is insulated, it will not function properly.
- ⇒ Do not insulate valves mounted to comply with NACE MR0175 requirements and which have nuts and bolts that are not suitable for sour gas environments.

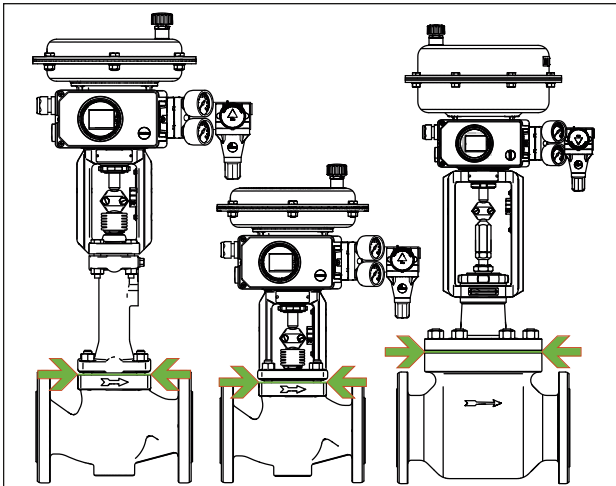

**Fig. 13:** Limit of insulation for control valves (example shown)

Proceed as follows:

- ⇒ Lay out the necessary material and tools to have them ready during installation work.
- ⇒ Flush the pipelines.

### i Note

*The plant operator is responsible for cleaning the pipelines in the plant.*

- ⇒ For steam applications, dry the pipelines. Moisture will damage the inside of the valve.
- ⇒ Check any mounted pressure gauges to make sure they function properly.
- ⇒ When the valve and actuator are already assembled, check the tightening torques of the bolted joints. Components may loosen during transport.

## 5.3 Mounting the device

The activities listed below are necessary to install the valve and before it can be started up.

### NOTICE

#### **Risk of leakage and valve damage due to over- or under-torquing.**

Observe the specified torques when tightening control valve components. Over-torquing leads to parts wearing out more quickly. Under-torquing may cause leakage.

- ⇒ Observe the tightening torques specified in ► AB 0100.

### NOTICE

#### **Risk of valve damage due to the use of unsuitable tools.**

Certain tools are required to work on the valve.

- ⇒ Only use tools approved by SAMSON (► AB 0100).

### 5.3.1 Mounting the external anti-rotation fixture

Before mounting the actuator, the external anti-rotation fixture must be mounted onto the plug stem in some cases. The valve must be closed beforehand. For SAMSON Type 3271 and Type 3277 Actuators with Type 3273 Hand-operated Actuator, observe the mounting and operating instructions of the hand-operated actuator (handwheel) to mount the anti-rotation fixture (► EB 8312-X).

**Standard version for Series 250 Valves, DN 125/ NPS 6 and larger**

See Fig. 14 and Fig. 15

1. Insert ball bearings (310) into the recesses in the bonnet.
2. Place the yoke (3) on the bonnet in such a way that the ball bearings fit into the recesses of the yoke.
3. Fasten the yoke (3) using the castellated nut (92).
4. Fasten the hanger (83) and warning label (255), if applicable, to the yoke using the screws (82).
5. Position the travel indicator scale (84) on the hanger (83) with the screws (85) according to Table 7.
6. Use a soft-faced hammer or lever press to press the sliding washers (309) with their beveled part first (without using any lubricant) into the recesses of the clamps (301) as far as they will go. Remove any excess material.
7. Apply a thin film of lubricant (114) to the threads of the stem (9) and screws (303).

**NOTICE**

**Impaired functioning due to incorrectly applied lubricant.**

⇒ Do not apply any lubricant to the threads of the clamps (301) or the plug stem.

8. Position the clamps (301) and stem (9) on the plug stem according to Table 7 and tighten screws (303) and washers (304) by hand.
9. Mount the actuator (see Chapter 5.3.2).
10. Thread the stem (9) upwards until the head of the stem rests on the extended actuator stem.
11. Retract the actuator stem to relieve the stem (9).
12. Gradually tighten the screws (303) in a criss-cross pattern. Observe the tightening torques specified in Table 5.


**Table 5: Tightening torques**

Bolt size	Tightening torque [Nm]
M12	50
M16	121

13. Check and ensure the following:

- There is a nominal clearance of 0.5 to 1 mm between the sliding washers and their contact surface on the yoke on each side (see detailed view Y in Fig. 15).
- The anti-rotation fixture does not get stuck on the yoke and can move freely in the direction of travel.

14. Extend the actuator stem again and mount the stem connector clamps.

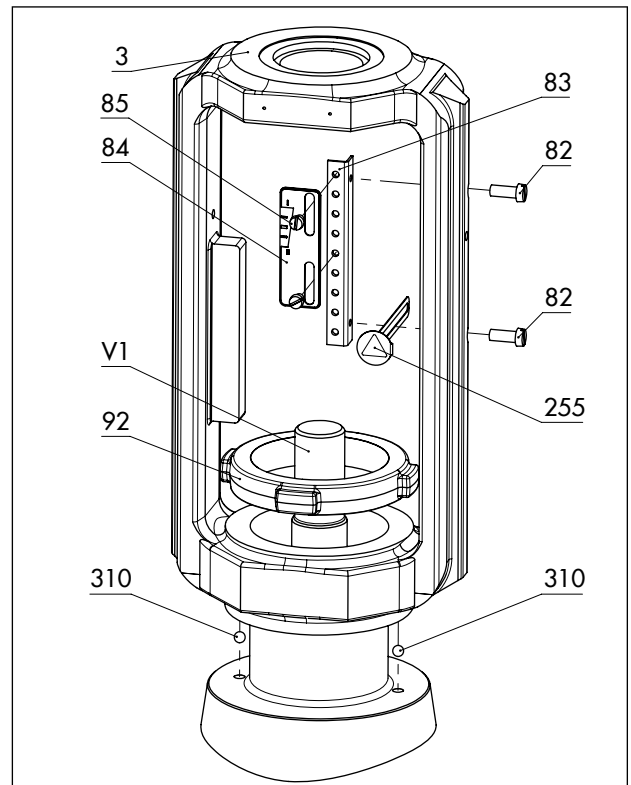

**Fig. 14: Overview of yoke assembly with travel indicator scale in the standard version**

3	Yoke	92	Castellated nut
82	Screws	255	Warning label
83	Hanger	310	Ball bearing
84	Travel indicator scale	V1	Plug stem
85	Screws		

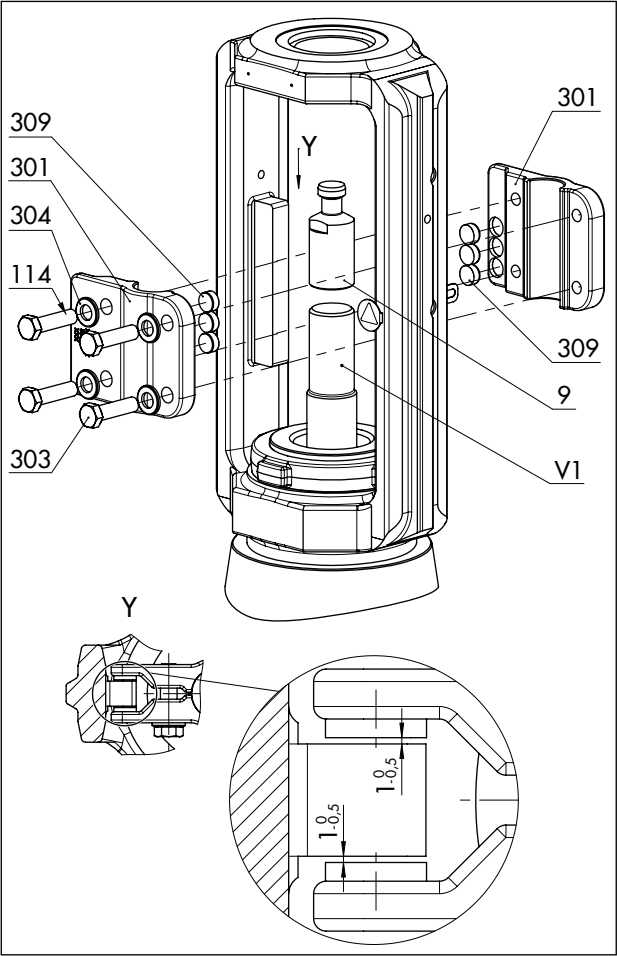


Fig. 15: Overview of anti-rotation fixture assembly in the standard version

- 9 Stem
- 114 Lubricant Gleitmo 1763 V
- 301 Clamps
- 303 Screws
- 304 Washers
- 309 Sliding washers
- V1 Plug stem

Special version for Series 250 Valves, DN 50 to 100/NPS 2 to 4

See Fig. 16 and Fig. 17

1. Fasten the travel indicator scale (84) with hanger (83) and warning label (255), if applicable, to the yoke using the screws (82). While fastening it, position the travel indicator scale (84) on the hanger (83) according to Table 7.
2. Screw tight the holder (302) using the screws (306) and washers (308). Observe the tightening torques specified in Table 6.
3. Fasten the yoke (3) using the castellated nut (92).
4. Use a soft-faced hammer or lever press to press the sliding washers (309) (without using any lu-

bricant) into the holes of the clamps (301) as far as they will go. Remove any excess material.

5. Apply a thin film of lubricant (114) to the threads of the stem (9) and screws (303).

NOTICE

Impaired functioning due to incorrectly applied lubricant.


⇒ Do not apply any lubricant to the threads of the clamps (301) or the plug stem.

6. Position the clamps (301) and stem (9) on the plug stem according to Table 7 and tighten screws (303) and washers (304) by hand.
7. Mount the actuator (see Chapter 5.3.2).
8. Thread the stem (9) upwards until the head of the stem rests on the extended actuator stem.
9. Retract the actuator stem to relieve the stem (9).
10. Gradually tighten the screws (303) in a criss-cross pattern. Observe the tightening torques specified in Table 6.

Table 6: Tightening torques


Item	Bolt size	Tightening torque [Nm]
306	M10	30
303	M8	15

11. Check and ensure the following:
  - There is a nominal clearance of 0.5 to 1 mm between the sliding washers and their contact surface on the yoke on each side (see detailed view Y in Fig. 17).
  - The anti-rotation fixture does not get stuck on the yoke and can move freely in the direction of travel.
12. Extend the actuator stem again and mount the stem connector clamps.

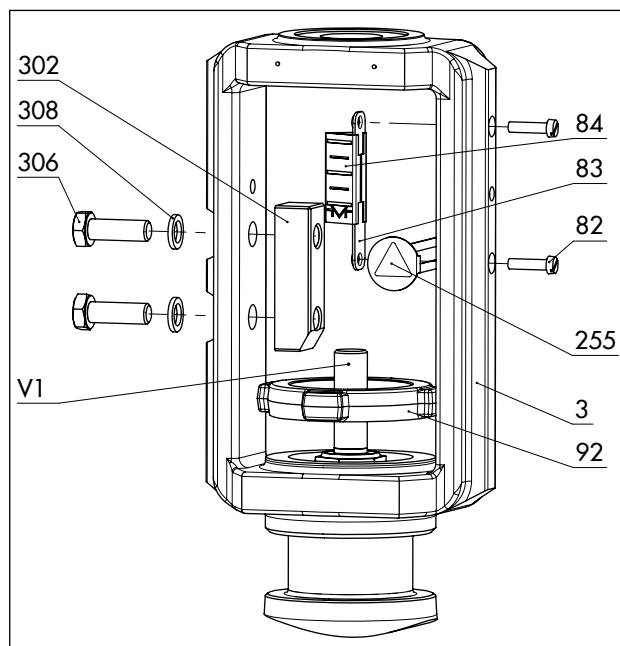

**Fig. 16:** Overview of yoke assembly with travel indicator scale in the special version

3	Yoke	255	Warning label
82	Screws	302	Holder
83	Hanger	306	Screws
84	Travel indicator scale	308	Washers
92	Castellated nut	V1	Plug stem

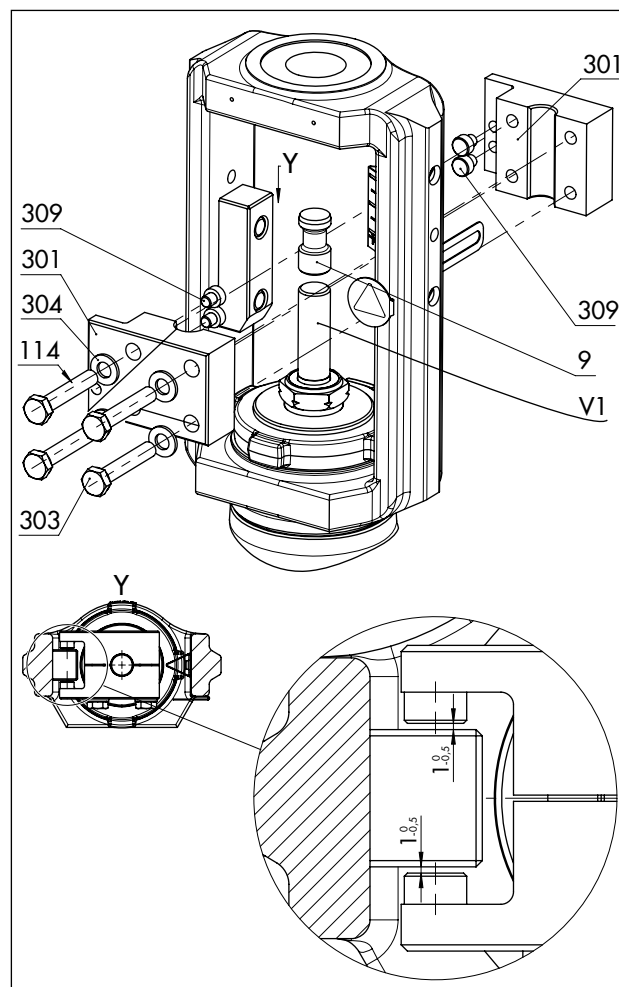

**Fig. 17:** Overview of anti-rotation fixture assembly in the special version

9	Stem	304	Washers
114	Lubricant Gleitmo 1763 V	309	Sliding washers
301	Clamps	V1	Plug stem
303	Screws		


**Table 7:** Mounting dimensions for Types 3271 and 3277 Pneumatic Actuators · See Fig. 18 for dimensional drawing

Actua- tor	Travel	Actuator preloading										Dimension when the valve is closed [mm]									
[cm²]	[mm]	[%]	[mm]	H <sub>F</sub>	H <sub>G</sub>	H <sub>I</sub>	H <sub>K</sub>	H <sub>L</sub>	H <sub>N</sub>	H <sub>O</sub>	H <sub>T</sub>										
DN 50 to 100/NPS 2 to 4 · Special version																					
350	15	0	0	111	75	192	54	-	66	42	-										
	15	25	3.75	115	71			-			-										
355 750	15	50	15	111	75			-			-										
	15	75	22.5	118.5	67.5			-			-										
	30	0	0	96	90			34.5			30										
	30	25	7.5	103.5	82.5			34.5			30										
1000 1400-60	15	100	60	136	105			-			-										
	30	75	45	121	120			-			-										
1400-120	30	75	90	231	195			-			-										
2800	30	100	120	231	195			-			-										
Actua- tor	Travel	Actuator preloading										Dimension when the valve is closed [mm]									
[cm²]	[mm]	[%]	[mm]	H <sub>F</sub>	H <sub>G</sub>	H <sub>I</sub>	H <sub>K</sub>	H <sub>L</sub>	H <sub>N</sub>	H <sub>O</sub>	H <sub>T</sub>										
DN 125 to 150/NPS 6 · Standard version																					
355 750	15	0	0	263.5	67.5	192	87	48	105	70	145										
	15	50	15	256	75			48			145										
	15	75	22.5	263.5	67.5			48			145										
	30	0	0	241	90			48			120										
	30	25	7.5	248.5	82.5			48			120										
1000 1400-60	15	100	60	226	105			48			103										
	30	0	0	211	120			48			88										
	30	75	45	211	120			48			88										
	60	0	0	166	165			48			58										
	60	25	15	181	150			48			58										
1400-120	15	87.5	105	236	180			63			105										
	30	0	0	191	225			48			75										
	30	75	90	221	195			48			105										
	60	0	0	308	255			63			FE <sup>2)</sup> =175										
	60	50	60	191	225			48			FA <sup>1)</sup> =75										
2800 5600	30	0	0	191	225			48			75										
	30	100	120	221	195			48			105										
	60	0	0	308	255			63			FE <sup>2)</sup> =175										
	60	75	90	191	225			48			FA <sup>1)</sup> =75										

Actua- tor	Travel	Actuator preloading		Dimension when the valve is closed [mm]											
[cm²]	[mm]	[%]	[mm]	H <sub>F</sub>	H <sub>G</sub>	H <sub>I</sub>	H <sub>K</sub>	H <sub>L</sub>	H <sub>N</sub>	H <sub>O</sub>	H <sub>T</sub>				
DN 200 to 250/NPS 8 to 10 up to seat bore 200 · Standard version															
355 750	30	0	0	241	90	195	87	61	108	65	120				
1000 1400-60	30	0	0	211	120			66			83				
	30	75	45	211	120			66			83				
	60	0	0	166	165			52			55				
	60	25	15	181	150			52			55				
1400-120	15	87.5	105	236	180			61			115				
	30	0	0	191	225			48			76				
	30	75	90	221	195			61			100				
	60	0	0	308	255			61			185				
	60	50	60	191	225			48			76				
2800 5600	30	0	0	191	255			48			76				
	30	100	120	221	195			61			100				
	60	0	0	308	255			61			185				
	60	75	90	191	225			48			76				
Actua- tor	Travel	Actuator preloading		Dimension when the valve is closed [mm]											
[cm²]	[mm]	[%]	[mm]	H <sub>F</sub>	H <sub>G</sub>			H <sub>I</sub>			H <sub>K</sub>	H <sub>L</sub>	H <sub>N</sub>	H <sub>O</sub>	H <sub>T</sub>
DN 250/NPS 10, seat bore 250 and DN 300 to 500/NPS 12 to 20 · Standard version															
1000 1400-60	30	0	0	281	135	237	87	100	150	110	121				
	30	75	45	296	120						135				
	60	0	0	251	165						91				
	60	25	15	266	150						91				
1400-120	60	0	0	308	255						145				
	60	50	60	338	225						175				
	120	0	0	278	285						FA <sup>1)</sup> =115 FE <sup>2)</sup> =86				
2800 5600	60	0	0	308	255						145				
	60	75	90	338	225						175				
	120	0	0	248	315						FE <sup>2)</sup> =86				
	120	25	30	278	285						115				

<sup>1)</sup> FA = Actuator stem extends (fail-close)

<sup>2)</sup> FE = Actuator stem retracts (fail-open)

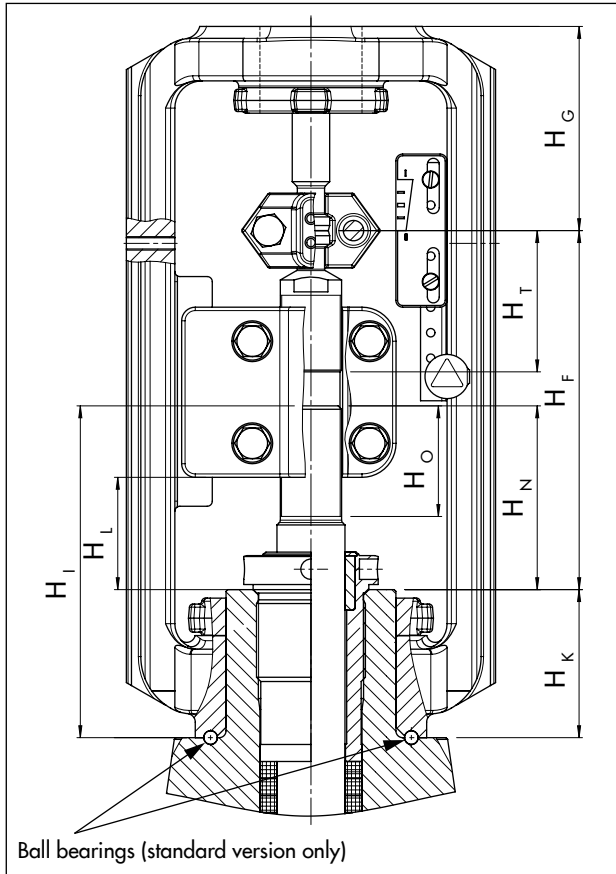

**Fig. 18:** Dimensional drawing with mounting dimensions for Types 3271 and 3277 Pneumatic Actuators

### 5.3.2 Mounting the actuator onto the valve

#### ⚠ WARNING

**Risk of personal injury due to preloaded springs in pneumatic actuators.**

Valves in combination with pneumatic actuators with preloaded springs are under tension. These control valves with SAMSON Type 3271 or Type 3277 Pneumatic Actuators can be identified by the long bolts protruding from the bottom of the actuator.

- ⇒ Before starting any work on the actuator, which requires the actuator to be opened, or when the actuator stem has become blocked, relieve the compression from the preloaded springs (see associated actuator documentation).

#### ⚠ WARNING

**Risk of personal injury due to incorrect removal of the anti-rotation fixture under tension.**

Once the actuator has been mounted on the valve and the assembly is ready for use, the clamps (301) of the anti-rotation fixture on the plug stem are under tension.

- ⇒ Follow the instructions in this document during mounting or removal.
- ⇒ Do not loosen the screws (303) of the anti-rotation fixture while the force generated by the supply air and/or the actuator springs is transmitted to the actuator stem and the stem (9).
- ⇒ Remove the actuator from the valve or otherwise ensure that it cannot transmit any forces to the actuator stem before removing the anti-rotation fixture from the plug stem.


Depending on the version, SAMSON control valves are either delivered with the actuator already mounted on the valve or the valve and actuator are delivered separately. When delivered separately, the valve and actuator must be assembled together on site.

#### Versions with V-port plug

To achieve the best flow conditions inside the valve, the V-port plug must always be installed with the port that releases the flow first when the valve opens facing toward the valve outlet. This is the largest of the three V-shaped ports (see Fig. 19).

- ⇒ Before mounting the actuator, determine which V-shaped port is uncovered first when the plug is lifted out of the seat.
- ⇒ On mounting the actuator, make sure that the V-shaped port uncovered first faces toward the valve outlet.



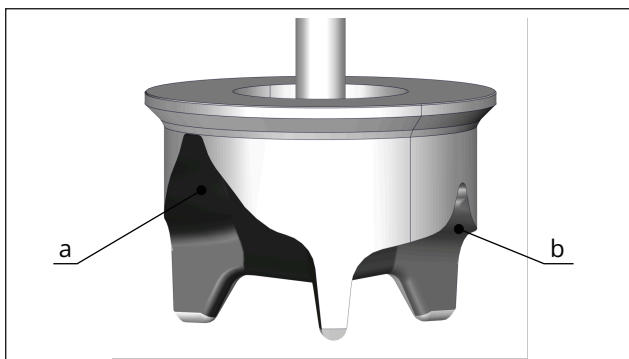

**Fig. 19:** V-port plug (example shown)

- a 1x large V-port:  
First to release the flow when the plug is lifted out of the seat.
- b 2x small V-ports


### **Note**

*In contrast to unsymmetrical plugs (e.g. V-port plug or perforated plug), the parabolic plug does not need to be aligned in any special way.*

### Versions with perforated plug

Only one hole is located near the seal facing of perforated plugs with equal percentage characteristic. Depending on the nominal size, the hole pattern varies and is partly unsymmetrical. The process medium in the valve flows through the holes as soon as the plug is lifted out of the seat. To achieve the best flow conditions inside the valve, the perforated plug must always be installed with the hole that releases the flow first when the valve opens facing toward the valve outlet (see Fig. 20).

- ⇒ Before mounting the actuator, check the hole pattern of the perforated plug and determine which hole is the closest to the seal facing. This hole is the first hole to release the flow when the plug is lifted out of the seat.
- ⇒ On mounting the actuator, make sure that the hole uncovered first faces toward the valve outlet.

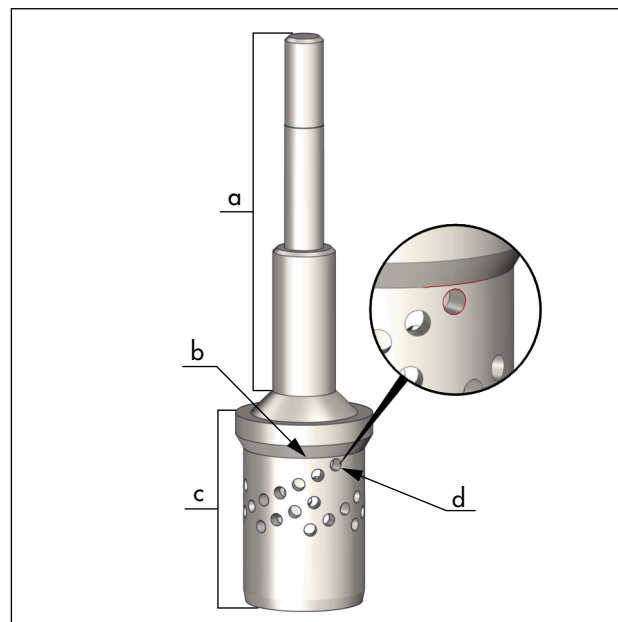

**Fig. 20:** Perforated plug (example shown)

- a Plug stem
- b Seal facing
- c Perforated plug
- d Hole closest to the seal facing of the plug

### Mounting the actuator

- ⇒ To mount the actuator, proceed as described in the associated actuator documentation.

### Aligning the travel indicator scale

After mounting the actuator, the travel indicator scale must be aligned. To do so, align '0' on the travel indicator scale with the tip of the stem connector clamp (see Fig. 18).

1. Move the valve to the closed position.
2. Loosen the screws on the travel indicator scale.
3. Align the travel indicator scale.
4. Fix the travel indicator scale into place by tightening the screws.

## 5.4 Installing the valve into the pipeline

### **NOTICE**

**Risk of valve damage due to work being carried out by personnel not qualified for such tasks.**

*The plant operator or specialist company performing the welding is responsible for the selection of the welding procedure and the actual welding operations on the valve. This also applies to any required heat treatment to be performed on the valve.*

## Installation

- ⇒ Only allow qualified welding personnel to carry out welding operations.
- ⇒ Before welding painted valves into the pipeline and/or subject them to heat in any way, observe the temperature resistance of the paint coating system. The number of the coating system used can be found in the order documentation. The temperature resistance of all of our coating systems is specified in the Brochure ► WA 268.

### NOTICE

#### **Premature wear and leakage due to insufficient support or suspension.**

- ⇒ Support or suspend the valve sufficiently at suitable points.

#### **Version with flanges**

1. Close the shut-off valves in the pipeline at the inlet and outlet of the plant section while the valve is being installed.
2. Prepare the relevant section of the pipeline for installing the valve.
3. Remove the protective caps from the valve ports before installing the valve.
4. Lift the valve using suitable lifting equipment to the site of installation (see Chapter 4.3.2). Observe the flow direction through the valve. The arrow on the valve indicates the direction of flow.
5. Make sure that the correct flange gaskets are used.
6. Bolt the pipe to the valve free of stress.
7. Attach a support or suspension on the valve, if necessary.

#### **Version with welding ends**

1. Close the shut-off valves in the pipeline at the inlet and outlet of the plant section while the valve is being installed.
2. Prepare the relevant section of the pipeline for installing the valve.
3. Remove the protective caps from the valve ports before installing the valve.
4. Lift the valve using suitable lifting equipment to the site of installation (see Chapter 4.3.2). Observe the flow direction through the valve. The arrow on the valve indicates the direction of flow.

5. Completely retract the actuator stem to protect the plug from sparks during welding.
6. Weld the valve free of stress into the pipeline.
7. Attach a support or suspension on the valve, if necessary.

## 5.5 Testing the installed valve

### ⚠ DANGER

#### **Risk of bursting due to incorrect opening of pressurized equipment or components.**

Control valves and pipelines are pressure equipment that may burst when handled incorrectly. Flying projectile fragments or the release of process medium under pressure can cause serious injury or even death. Before starting any work on pressure-bearing or pressure-retaining parts belonging to the valve assembly:

- ⇒ Depressurize all plant sections affected and the valve (including the actuator). Release any stored energy.
- ⇒ Drain the process medium from the plant sections affected as well as from the valve.

### ⚠ WARNING

#### **Risk of personal injury due to pressurized components and as a result of process medium being discharged.**

Valves with a bellows seal have a test connection at the top on the intermediate piece.

- ⇒ Do not loosen the screw on the test connection while the valve is pressurized.

### ⚠ WARNING

#### **Risk of hearing loss or deafness due to loud noise.**

Noise emission (e.g. cavitation or flashing) may occur during operation caused by the process medium and the operating conditions. Additionally, a loud noise may briefly occur through the sudden venting of the pneumatic actuator or pneumatic valve accessories not fitted with noise-reducing elements. Both can damage hearing.

- ⇒ Follow the standard operating procedures provided by the plant operator.

In the event of a potential risk:

- ⇒ Wear hearing protection when working near the valve.

**⚠ WARNING****Crush hazard arising from moving parts.**

The control valve contains moving parts (actuator and plug stem), which can injure hands or fingers if inserted into the valve.

- ⇒ Do not insert hands or finger into the yoke while the air supply is connected to the actuator.
- ⇒ Before working on the pneumatic control valve, disconnect and lock the pneumatic air supply as well as the control signal.
- ⇒ Do not impede the movement of the actuator and plug stem by inserting objects into the yoke.
- ⇒ Before unblocking the actuator and plug stem after they have become blocked (e.g. due to seizing up after remaining in the same position for a long time), release any stored energy in the actuator (e.g. spring compression). See associated actuator documentation.

**⚠ WARNING****Risk of personal injury due to exhaust air being vented or compressed air escaping from pneumatically operated components.**

When the valve is operated with a pneumatic actuator or pneumatic valve accessories, exhaust air is vented from the actuator, for example, while the valve is operating and when the valve opens or closes.

- ⇒ Wear eye protection when working in close proximity to pneumatic fittings and in the danger zone of the vent openings.

**⚠ WARNING****Risk of personal injury due to preloaded springs in pneumatic actuators.**

Valves in combination with pneumatic actuators with preloaded springs are under tension. These control valves with SAMSON Type 3271 or Type 3277 Pneumatic Actuators can be identified by the long bolts protruding from the bottom of the actuator.

- ⇒ Before starting any work on the actuator, which requires the actuator to be opened, or when the actuator stem has become blocked, relieve the compression from the preloaded springs (see associated actuator documentation).

To test the valve functioning before start-up or putting back the valve into operation, perform the following tests:

**5.5.1 Leak test**

The plant operator is responsible for performing the leak test and selecting the test method. The leak test must comply with the requirements of the national and international standards that apply at the site of installation.

**💡 Tip**

Our after-sales service can support you to plan and perform a leak test for your plant.

1. Close the valve.
2. Slowly apply the test medium to the inlet space upstream of the valve. A sudden surge in pressure and resulting high flow velocities can damage the valve.
3. Open the valve.
4. Apply the required test pressure.
5. Check the valve for leakage to the atmosphere.
6. Depressurize the pipeline section and valve.
7. Rework any parts that leak (see section 'Adjusting the packing') and repeat the leak test.

**Adjusting the packing**

A label on the yoke indicates whether an adjustable packing is installed (see Chapter 2).


**📌 NOTICE****Impaired valve functioning due to increased friction as a result of the threaded bushing being tightened too far.**

- ⇒ Make sure that the plug stem can still move smoothly after the threaded bushing has been tightened.

1. Tighten the threaded bushing gradually (by turning it clockwise) until the packing seals the valve.
2. Open and close the valve several times.
3. Check the valve for leakage to the atmosphere.
4. Repeat steps 1 and 2 until the packing completely seals the valve.

## Installation

- ⇒ If the adjustable packing does not seal properly, contact our after-sales service.

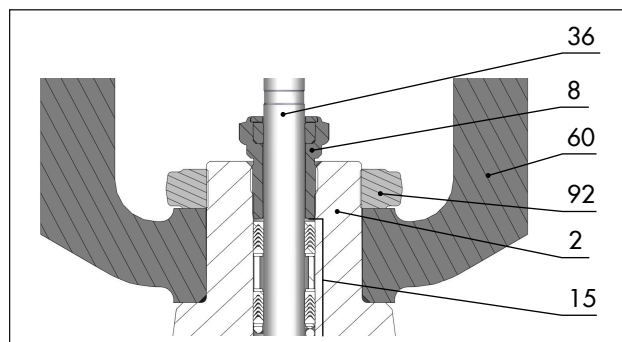

**Fig. 21:** Packing with threaded bushing (centrally fastened)  
(example shown)

2	Valve bonnet	36	Plug or piston stem
8	Threaded bushing	60	Yoke
15	Packing set	92	Castellated nut

During the pressure test, make sure the following conditions are met:

- Retract the plug stem to open the valve.
- Observe the maximum permissible pressure for both the valve and plant.

### 5.5.2 Travel motion

The movement of the actuator stem must be linear and smooth.

- ⇒ Apply the maximum and minimum control signals to check the end positions of the valve while observing the movement of the actuator stem.
- ⇒ Check the travel reading at the travel indicator scale.

### 5.5.3 Fail-safe position

The fail-safe position of a valve can only be checked when the valve is combined with an actuator that moves to the fail-safe position upon air supply or control signal failure.

#### Fail-safe position with pneumatic actuators with integrated springs

- ⇒ Shut off the signal pressure line.
- ⇒ Check whether the valve moves to the fail-safe position (see Chapter 3.1).

### 5.5.4 Pressure test

The plant operator is responsible for performing the pressure test.



**Tip**

*Our after-sales service can support you to plan and perform a pressure test for your plant.*

## 6 Start-up

The work described in this chapter is to be performed only by personnel appropriately qualified to carry out such tasks.

### **⚠ WARNING**

#### **Risk of burn injuries due to cold components and pipelines.**

Depending on the process medium, valve components and pipelines may get extremely cold and cause cryogenic burns.

⇒ Follow the standard operating procedures provided by the plant operator.

In the event of a potential risk:

- ⇒ Allow components and pipelines to reach ambient temperature.
- ⇒ Wear protective clothing and safety gloves.

### **⚠ WARNING**

#### **Risk of personal injury due to pressurized components and as a result of process medium being discharged.**

Valves with a bellows seal have a test connection at the top on the intermediate piece.

⇒ Do not loosen the screw on the test connection while the valve is pressurized.

### **⚠ WARNING**

#### **Risk of hearing loss or deafness due to loud noise.**

Noise emission (e.g. cavitation or flashing) may occur during operation caused by the process medium and the operating conditions. Additionally, a loud noise may briefly occur through the sudden venting of the pneumatic actuator or pneumatic valve accessories not fitted with noise-reducing elements. Both can damage hearing.

⇒ Follow the standard operating procedures provided by the plant operator.

In the event of a potential risk:

- ⇒ Wear hearing protection when working near the valve.

### **⚠ WARNING**

#### **Crush hazard arising from moving parts.**

The control valve contains moving parts (actuator and plug stem), which can injure hands or fingers if inserted into the valve.

- ⇒ Do not insert hands or finger into the yoke while the air supply is connected to the actuator.
- ⇒ Before working on the pneumatic control valve, disconnect and lock the pneumatic air supply as well as the control signal.
- ⇒ Do not impede the movement of the actuator and plug stem by inserting objects into the yoke.
- ⇒ Before unblocking the actuator and plug stem after they have become blocked (e.g. due to seizing up after remaining in the same position for a long time), release any stored energy in the actuator (e.g. spring compression). See associated actuator documentation.

### **⚠ WARNING**

#### **Risk of personal injury due to exhaust air being vented or compressed air escaping from pneumatically operated components.**

When the valve is operated with a pneumatic actuator or pneumatic valve accessories, exhaust air is vented from the actuator, for example, while the valve is operating and when the valve opens or closes.

- ⇒ Wear eye protection when working in close proximity to pneumatic fittings and in the danger zone of the vent openings.

Before start-up or putting the device back into service, make sure the following conditions are met:

- The control valve is properly installed into the pipeline (see Chapter 5).
- The leak and function tests have been completed successfully (see Chapter 5.5).
- The prevailing conditions in the plant section affected meet the valve sizing requirements (see section 'Intended use' in Chapter 1).

### Start-up/putting the device back into operation

1. Allow the valve to cool down or warm up to reach ambient temperature before start-up when the ambient temperature and process medium temperature differ greatly or the medium properties require such a measure.
2. Slowly open the shut-off valves in the pipeline. Slowly opening these valves prevents a sudden surge in pressure and high flow velocities which may damage the valve.
3. Check the valve to ensure it functions properly.

## 7 Operation

Immediately after completing start-up or putting the valve back into operation, the valve is ready for use.

### **⚠ WARNING**

#### **Risk of burn injuries due to cold components and pipelines.**

Depending on the process medium, valve components and pipelines may get extremely cold and cause cryogenic burns.

⇒ Follow the standard operating procedures provided by the plant operator.

In the event of a potential risk:

- ⇒ Allow components and pipelines to reach ambient temperature.
- ⇒ Wear protective clothing and safety gloves.

### **⚠ WARNING**

#### **Risk of personal injury due to pressurized components and as a result of process medium being discharged.**

Valves with a bellows seal have a test connection at the top on the intermediate piece.

⇒ Do not loosen the screw on the test connection while the valve is pressurized.

### **⚠ WARNING**

#### **Risk of hearing loss or deafness due to loud noise.**

Noise emission (e.g. cavitation or flashing) may occur during operation caused by the process medium and the operating conditions. Additionally, a loud noise may briefly occur through the sudden venting of the pneumatic actuator or pneumatic valve accessories not fitted with noise-reducing elements. Both can damage hearing.

⇒ Follow the standard operating procedures provided by the plant operator.

In the event of a potential risk:

- ⇒ Wear hearing protection when working near the valve.

### **⚠ WARNING**

#### **Crush hazard arising from moving parts.**

The control valve contains moving parts (actuator and plug stem), which can injure hands or fingers if inserted into the valve.

- ⇒ Do not insert hands or finger into the yoke while the air supply is connected to the actuator.
- ⇒ Before working on the pneumatic control valve, disconnect and lock the pneumatic air supply as well as the control signal.
- ⇒ Do not impede the movement of the actuator and plug stem by inserting objects into the yoke.
- ⇒ Before unblocking the actuator and plug stem after they have become blocked (e.g. due to seizing up after remaining in the same position for a long time), release any stored energy in the actuator (e.g. spring compression). See associated actuator documentation.

### **⚠ WARNING**

#### **Risk of personal injury due to exhaust air being vented or compressed air escaping from pneumatically operated components.**

When the valve is operated with a pneumatic actuator or pneumatic valve accessories, exhaust air is vented from the actuator, for example, while the valve is operating and when the valve opens or closes.

- ⇒ Wear eye protection when working in close proximity to pneumatic fittings and in the danger zone of the vent openings.

## 7.1 Normal operation

The handwheel of valves with actuators fitted with a handwheel must be in the neutral position during normal operation.

## 7.2 Manual operation

Valves with actuators fitted with a handwheel can be manually closed or opened in the event of failure of the auxiliary energy supply.

## 8 Malfunctions

Read hazard statements, warnings and caution notes in Chapter 1.

### 8.1 Troubleshooting

Error	Possible reasons	Recommended action
Actuator and plug stem does not move on demand.	Actuator is blocked.	Put the control valve out of operation (see Chapter 10) and remove the blockage. <b>WARNING!</b> A blocked actuator or plug stem (e.g. due to seizing up after remaining in the same position for a long time) can suddenly start to move uncontrollably. Injury to hands or fingers is possible if they are inserted into the actuator or valve. Before trying to unblock the actuator or plug stem, disconnect and lock the pneumatic air supply as well as the control signal. Before unblocking the actuator, release any stored energy in the actuator (e.g. spring compression). See associated actuator documentation.
	Pneumatic actuators: Diaphragm in the actuator defective	See associated actuator documentation.
	Pneumatic actuator: Signal pressure too low	Check the signal pressure. Check the signal pressure line for leakage.
Jolting movement of the actuator and plug stem	Version with adjustable packing <sup>1)</sup> : Packing tightened too far	Tighten the packing correctly (see section 'Adjusting the packing' in Chapter 5.5.1).
Actuator and plug stem do not stroke through the full range.	Pneumatic actuator: Signal pressure too low	Check the signal pressure. Check the signal pressure line for leakage.
	Travel stop active	See associated actuator documentation.
	Incorrect setting of valve accessories	Check the settings of the valve accessories.
Increased flow through closed valve (seat leakage)	Dirt or other foreign particles deposited between the seat and plug.	Shut off the section of the pipeline and flush the valve.
	Valve trim is worn out.	Replace valve trim (see Chapter 9) or contact our after-sales service.
The valve leaks to the atmosphere (fugitive emissions).	Defective packing	Replace packing (see Chapter 9) or contact our after-sales service.
	Version with adjustable packing <sup>1)</sup> : Packing not tightened correctly	Adjust the packing (see section 'Adjusting the packing' in Chapter 5.5.1). Contact our after-sales service when it continues to leak.
	Version with bellows seal: the metal bellows is defective	Contact our after-sales service.
	Flanged joint loose or body gaskets worn out	Check the flanged joint. Replace gaskets at the flanged joint (see Chapter 9) or contact our after-sales service.

<sup>1)</sup> See Chapter 2



---

**i Note**

*Contact SAMSON's After-sales Service for malfunctions not listed in the table.*

---

## **8.2 Emergency action**

Plant operators are responsible for emergency action to be taken in the plant.

In the event of a valve malfunction:

1. Close the shut-off valves upstream and downstream of the control valve to stop the process medium from flowing through the valve.
2. Perform troubleshooting (see Chapter 8.1).
3. Rectify those malfunctions that can be remedied following the information given in this document. Contact our after-sales service in all other cases.

### **Putting the device back into operation after a malfunction**

See Chapter 6.

## 9 Servicing

The work described in this chapter is to be performed only by personnel appropriately qualified to carry out such tasks.

The following documents are also required for servicing the control valve:

- Mounting and operating instructions for the mounted actuator, for example:
  - ► EB 8310-X for Type 3271 and Type 3277 Pneumatic Actuators
- ► AB 0100 for tools, tightening torques and lubricants

### **⚠ DANGER**

#### **Risk of bursting due to incorrect opening of pressurized equipment or components.**

Control valves and pipelines are pressure equipment that may burst when handled incorrectly. Flying projectile fragments or the release of process medium under pressure can cause serious injury or even death. Before starting any work on pressure-bearing or pressure-retaining parts belonging to the valve assembly:

- ⇒ Depressurize all plant sections affected and the valve (including the actuator). Release any stored energy.
- ⇒ Drain the process medium from the plant sections affected as well as from the valve.

### **⚠ WARNING**

#### **Risk of burn injuries due to cold components and pipelines.**

Depending on the process medium, valve components and pipelines may get extremely cold and cause cryogenic burns.

- ⇒ Follow the standard operating procedures provided by the plant operator.  
In the event of a potential risk:
  - ⇒ Allow components and pipelines to reach ambient temperature.
  - ⇒ Wear protective clothing and safety gloves.

### **⚠ WARNING**

#### **Risk of personal injury due to pressurized components and as a result of process medium being discharged.**

Valves with a bellows seal have a test connection at the top on the intermediate piece.

- ⇒ Do not loosen the screw on the test connection while the valve is pressurized.

### **⚠ WARNING**

#### **Risk of hearing loss or deafness due to loud noise.**

Noise emission (e.g. cavitation or flashing) may occur during operation caused by the process medium and the operating conditions. Additionally, a loud noise may briefly occur through the sudden venting of the pneumatic actuator or pneumatic valve accessories not fitted with noise-reducing elements. Both can damage hearing.

- ⇒ Follow the standard operating procedures provided by the plant operator.  
In the event of a potential risk:
  - ⇒ Wear hearing protection when working near the valve.

### **⚠ WARNING**

#### **Crush hazard arising from moving parts.**

The control valve contains moving parts (actuator and plug stem), which can injure hands or fingers if inserted into the valve.

- ⇒ Do not insert hands or finger into the yoke while the air supply is connected to the actuator.
- ⇒ Before working on the pneumatic control valve, disconnect and lock the pneumatic air supply as well as the control signal.
- ⇒ Do not impede the movement of the actuator and plug stem by inserting objects into the yoke.
- ⇒ Before unblocking the actuator and plug stem after they have become blocked (e.g. due to seizing up after remaining in the same position for a long time), release any stored energy in the actuator (e.g. spring compression). See associated actuator documentation.

**⚠ WARNING****Risk of personal injury due to exhaust air being vented or compressed air escaping from pneumatically operated components.**

When the valve is operated with a pneumatic actuator or pneumatic valve accessories, exhaust air is vented from the actuator, for example, while the valve is operating and when the valve opens or closes.

- ⇒ Wear eye protection when working in close proximity to pneumatic fittings and in the danger zone of the vent openings.

**⚠ WARNING****Risk of personal injury due to preloaded springs in pneumatic actuators.**

Valves in combination with pneumatic actuators with preloaded springs are under tension. These control valves with SAMSON Type 3271 or Type 3277 Pneumatic Actuators can be identified by the long bolts protruding from the bottom of the actuator.

- ⇒ Before starting any work on the actuator, which requires the actuator to be opened, or when the actuator stem has become blocked, relieve the compression from the preloaded springs (see associated actuator documentation).

**⚠ WARNING****Risk of personal injury due to residual process medium in the valve.**

While working on the valve, residual medium can flow out of the valve and, depending on its properties, cause personal injury, e.g. (chemical) burns.

- ⇒ Follow the standard operating procedures provided by the plant operator.

In the event of a potential risk:

- ⇒ If possible, drain the process medium from the plant sections affected and from the valve.
- ⇒ Wear protective clothing, safety gloves, respiratory protection and eye protection.

**ⓘ NOTICE****Risk of leakage and valve damage due to over- or under-torquing.**

Observe the specified torques when tightening control valve components. Over-torquing leads to parts wear-

ing out more quickly. Under-torquing may cause leakage.

- ⇒ Observe the tightening torques specified in  
▶ AB 0100.

**ⓘ NOTICE****Risk of valve damage due to the use of unsuitable tools.**

Certain tools are required to work on the valve.

- ⇒ Only use tools approved by SAMSON (▶ AB 0100).

**ⓘ NOTICE****Risk of valve damage due to the use of unsuitable lubricants.**

The lubricants to be used depend on the valve material. Unsuitable lubricants may corrode and damage surfaces.

- ⇒ Only use lubricants approved by SAMSON  
(▶ AB 0100).

**i Note**

The control valve was checked by SAMSON before delivery.

- Certain test results certified by SAMSON lose their validity when the valve is opened. Such testing includes seat leakage and leak tests.
- The product warranty becomes void if service or repair work not described in these instructions is performed without prior agreement by SAMSON's After-sales Service.
- Only use original spare parts by SAMSON, which comply with the original specifications.

**9.1 Periodic testing**

Depending on the operating conditions, check the control valve at certain intervals to prevent possible failure before it can occur. Plant operators are responsible for drawing up an inspection and test plan.

**💡 Tip**


Our after-sales service can support you in drawing up an inspection and test plan for your plant.

SAMSON recommends the following inspections and tests:

Inspection and testing	Recommended action to be taken in the event of a negative result
Check the markings, labels and nameplates on the control valve for their readability and completeness.	Immediately renew damaged, missing or incorrect nameplates or labels. Clean any inscriptions that are covered with dirt and are illegible.
External leakage <sup>1)</sup> : Inspect the control valve at the possible points of leakage to ensure there is no leakage (see following image).	Check the bolted joint (tightening torque). Replace the gaskets at the flanged joints. To do so, put the control valve out of operation (see Chapter 10).
Version with bellows seal: <b>WARNING!</b> Risk of personal injury due to pressurized components and as a result of process medium being discharged. Do not loosen the screw on the test connection while the valve is pressurized.	Version with adjustable packing <sup>2)</sup> : Adjust the packing (see section 'Adjusting the packing' in Chapter 5.5.1) or replace the packing (see Chapter 9.4). If the bellows seal is defective, put the control valve out of operation (see Chapter 10). Contact our after-sales service to repair the bellows seal (see Chapter 12).
Seat leakage <sup>1)</sup> (see following image) (without testing to check that the leakage class requirements are met)	Shut off the section of the pipeline and flush the valve to remove any dirt and/or deposited foreign particles between the seat and plug. Renew seat and plug, if necessary (see Chapter 9.4). To do so, put the control valve out of operation (see Chapter 10).
Check the control valve for external damage that could impair the proper functioning of the control valve or even its safe operation.	Repair any damage immediately. If necessary, put the control valve out of operation to do so (see Chapter 10).
Check the valve accessories to ensure they are firmly mounted.	Tighten the connections of the valve accessories.
Check to ensure that the actuator and plug stems move smoothly.	Version with adjustable packing <sup>2)</sup> : Tighten the packing correctly (see section 'Adjusting the packing' in Chapter 5.5.1). If the actuator stem or plug stem is blocked, put the control valve out of operation (see Chapter 10) and remove the blockage. <b>WARNING!</b> A blocked actuator or plug stem (e.g. due to seizing up after remaining in the same position for a long time) can suddenly start to move uncontrollably. Injury to hands or fingers is possible if they are inserted into the actuator or valve. Before trying to unblock the actuator or plug stem, disconnect and lock the pneumatic air supply as well as the control signal. Before unblocking the actuator, release any stored energy in the actuator (e.g. spring compression). See associated actuator documentation. SAMSON recommends the use of positioners with integrated diagnostic firmware for control valves used for on/off service. The partial stroke test included in this software helps prevent a shut-off valve normally in its end position from seizing up or getting jammed.
If possible, check the valve's fail-safe position by briefly interrupting the air supply.	Put the control valve out of operation (see Chapter 10). Identify the cause for the malfunction and rectify it (see Chapter 8).

<sup>1)</sup> EXPERTplus valve diagnostics can help identify external leakage at dynamic sealing systems as well as seat leakage in valve versions without balanced plugs while the valve is in use. EXPERTplus comes as standard in the digital positioners (Type 3730, TROVIS 3730, Type 3731, TROVIS 3793, TROVIS 3797).

<sup>2)</sup> See Chapter 2

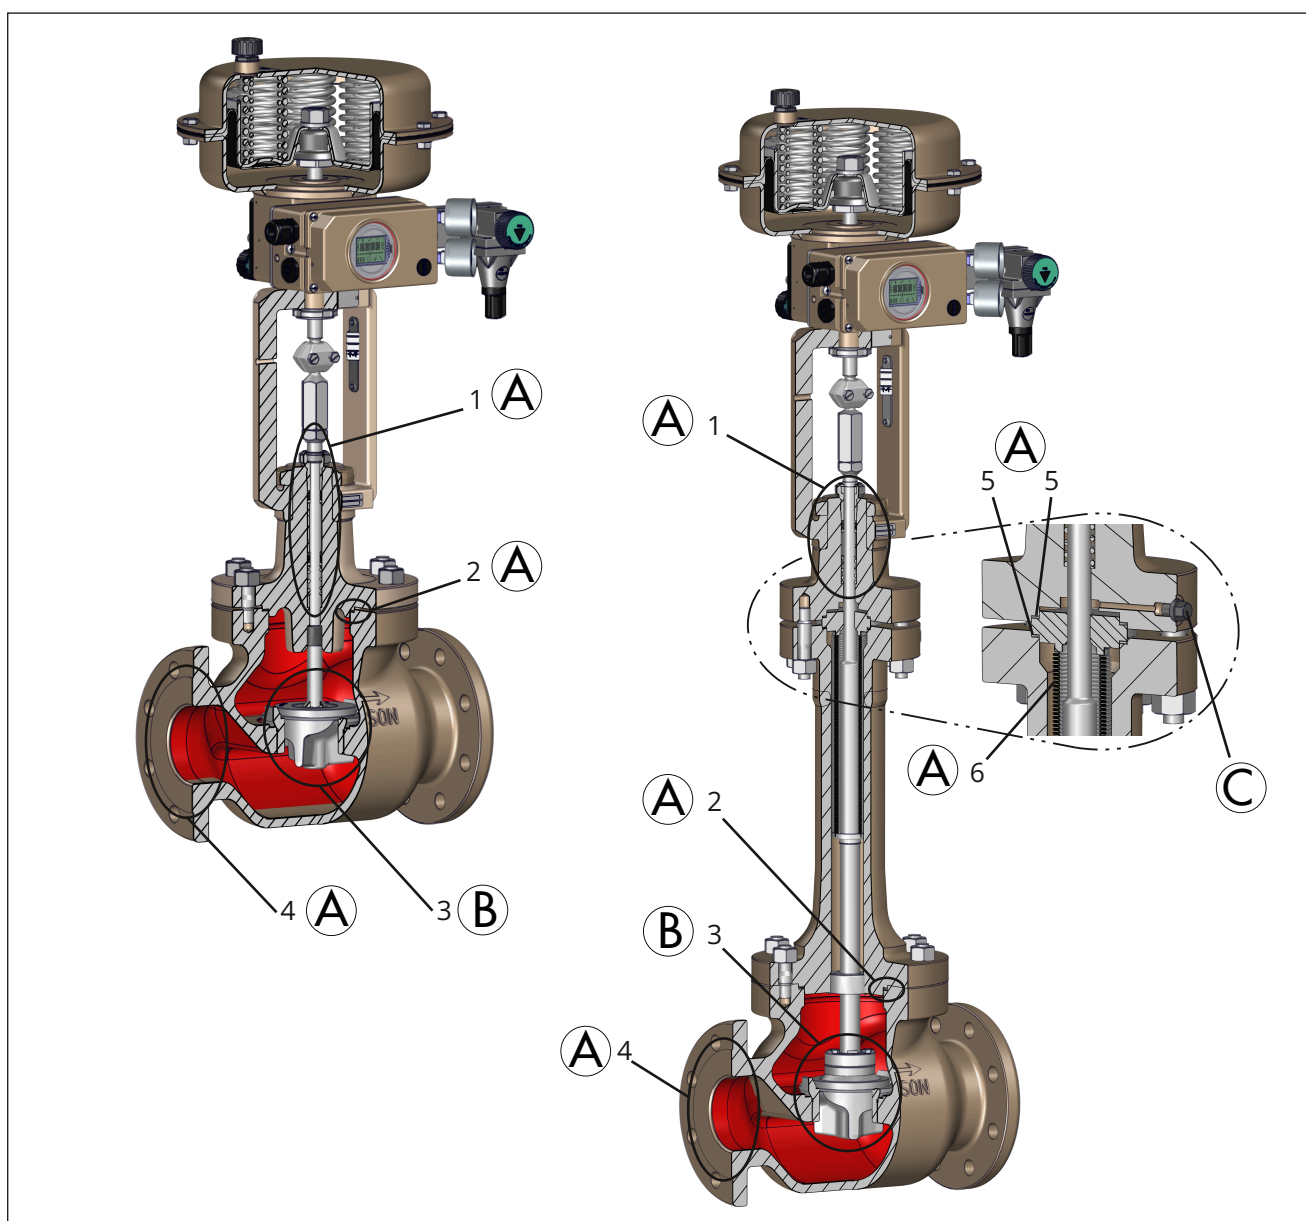

**Fig. 22:** Possible points of leakage on the control valve: Version with standard bonnet (left) and version with bellows seal (right), which also applies to versions with insulating section or intermediate piece.

- |  |   |
|--|---|
| Ⓐ External leakage                               | 3 Seat/body and plug/seat   |
| Ⓑ Seat leakage                                   | 4 Connection to the pipeline<br>(static sealing)  |
| Ⓒ Test connection to monitor bellows for leakage | 5 Body gaskets at bellows seal/insulating section/intermediate<br>piece<br>(static sealing) |
| 1 Plug stem guide (packing)<br>(dynamic sealing) | 6 Metal bellows<br>(dynamic sealing)  |
| 2 Body gaskets<br>(static sealing)               |   |

## 9.2 Service work preparations

1. Lay out the necessary material and tools to have them ready for the service work.
2. Put the control valve out of operation (see Chapter 10).

- Remove the actuator from the valve (see associated actuator documentation).

### **Note**

To remove an actuator with "stem extends" fail-safe action and/or with preloaded springs, a certain signal pressure must be applied to the actuator (see associated actuator documentation). Once the work is completed, the signal pressure must be removed and the air supply disconnected again and locked.

### **Tip**

SAMSON recommends removing the valve from the pipeline before performing any service work (see Chapter 11).


Once preparation is completed, the service and/or conversion work can be performed as described in the subchapters of Chapter 9.4.

## 9.3 Installing the valve after service work

- Mount actuator. See associated actuator documentation.
- Adjust lower or upper signal bench range (see associated actuator documentation).
- If the valve has been removed, re-install the valve into the pipeline (see Chapter 5).
- Put the control valve back into operation (see Chapter 6). Observe the requirements and conditions for start-up or putting the device back into operation.


## 9.4 Service work

- ⇒ Before performing any service work, preparations must be made to the control valve (see Chapter 9.2).
- ⇒ After all service work is completed, check the control valve before putting it back into operation (see Chapter 5.5).

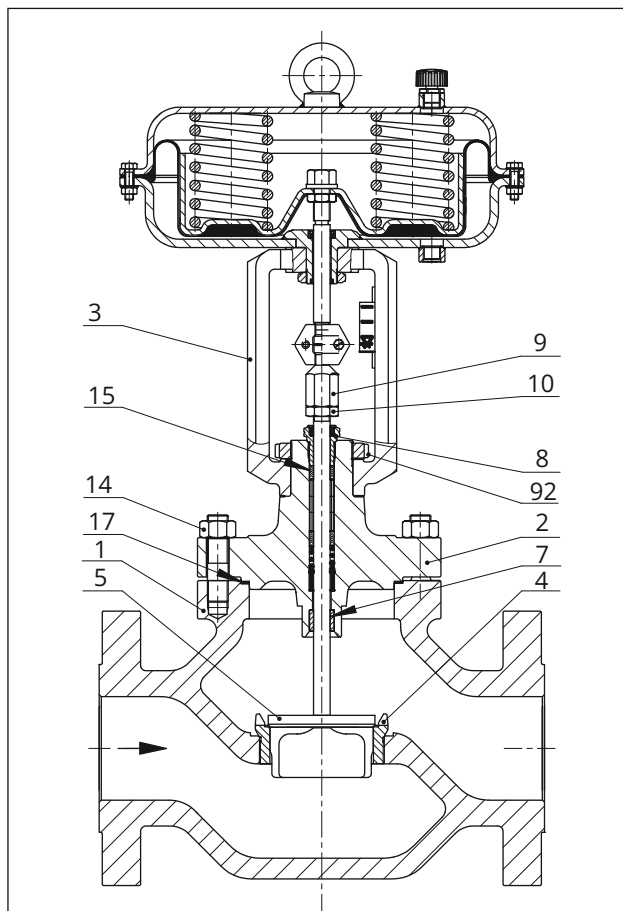

**Fig. 23:** Standard version of Type 3251/3251-AM Valve with Type 3271 Actuator

1	Body	9	Stem connector nut
2	Flange	10	Lock nut
3	Yoke	14	Nut
4	Seat	15	Packing set
5	Plug (with plug stem)	17	Body gasket
7	Guide bushing	92	Castellated nut
8	Threaded bushing (packing nut)		

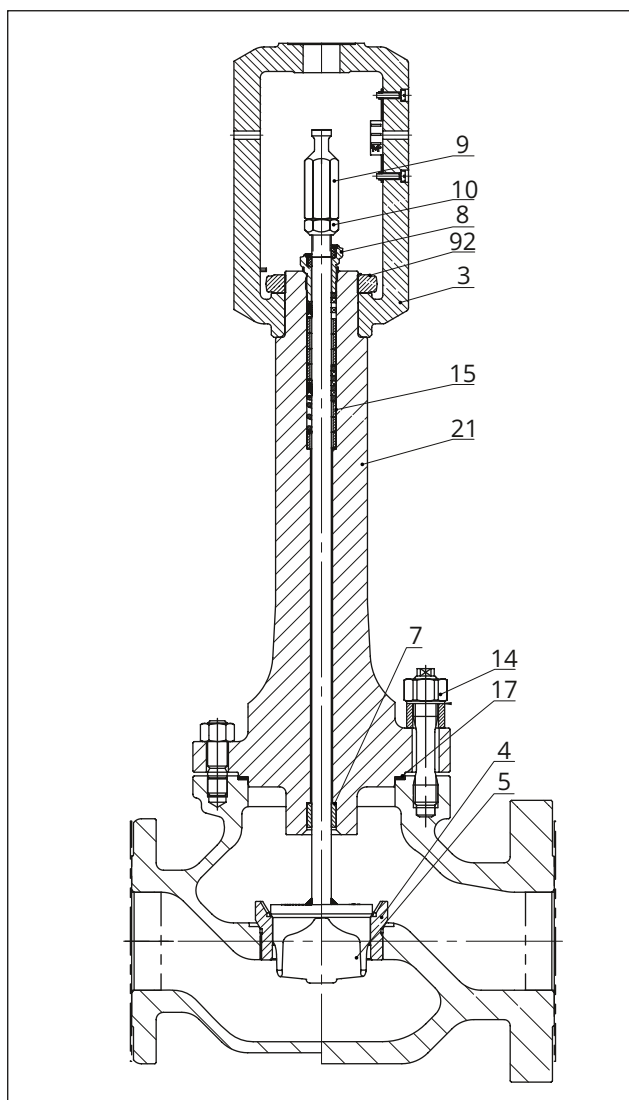

**Fig. 24:** Type 3251, version with insulating section

3	Yoke	10	Lock nut
4	Seat	14	Nut
5	Plug (with plug stem)	15	Packing set
7	Guide bushing	17	Body gasket
8	Threaded bushing (packing nut)	21	Insulating section
9	Stem connector nut	92	Castellated nut

### 9.4.1 Replacing the gasket

#### NOTICE

**Risk of control valve damage due to incorrect servicing.**

⇒ The gasket can only be replaced when all the following conditions are met:

- The nominal size is  $\leq NPS 4$ .
- The valve does not have a balanced plug.
- The valve does not have a flow divider.

⇒ To replace the gasket in other valve versions, contact our after-sales service.

#### a) Standard version

1. Undo the body nuts (14) gradually in a criss-cross pattern.
2. Lift the flange (2) and plug with plug stem (5) off the body (1).
3. Remove the gasket (17). Carefully clean the sealing faces in the valve body (1) and on the flange (2).
4. Insert the new gasket (17) into the body.
5. Place the flange (2) onto the body (1). At the same time, insert the plug with plug stem (5) upright into the body (1) and center them on the seat (4).

**Version with V-port plug:** Place the flange (2) onto the body, making sure that the largest V-shaped port of the plug faces towards the valve outlet.

**Version with perforated plug:** Place the flange (2) onto the valve body, making sure that the hole of the plug that releases the flow first faces toward the valve outlet.

See Chapter 5.3.2.

6. Firmly press the plug (5) into the seat (4). Fasten down the flange (2) with the body nuts (14). Tighten the nuts gradually in a crisscross pattern. Observe tightening torques.

#### b) Version with insulating section or bellows seal

1. Undo the body nuts (14) gradually in a criss-cross pattern.
2. Lift the insulating section (21) and plug with plug stem (5) off the body (1).
3. Remove the gasket (17). Carefully clean the sealing faces in the valve body (1) and on the insulating section (21).
4. Insert the new gasket (17) into the body.
5. Place the insulating section (21) onto the body (1). At the same time, insert the plug with plug stem (5) upright into the body (1) and center them on the seat (4).

**Version with V-port plug:** Place the insulating section (21) onto the body, making sure that the



largest V-shaped port of the plug faces towards the valve outlet.

**Version with perforated plug:** Place the insulating section (21) onto the valve body, making sure that the hole of the plug that releases the flow first faces toward the valve outlet.

See Chapter 5.3.2.

6. Firmly press the plug (5) into the seat (4). Fasten down the insulating section (21) with the body nuts (14). Tighten the nuts gradually in a criss-cross pattern. Observe tightening torques.

9.4.2 Replacing the packing

NOTICE

**Risk of control valve damage due to incorrect servicing.**

- ⇒ The packing can only be replaced when all the following conditions are met:
- The nominal size is  $\leq$ NPS 4.
  - The valve does not have a balanced plug.
  - The valve does not have a bellows seal.
  - The standard or ADSEAL packing is installed in the valve.
- ⇒ To replace the packing in other valve versions, contact our after-sales service.

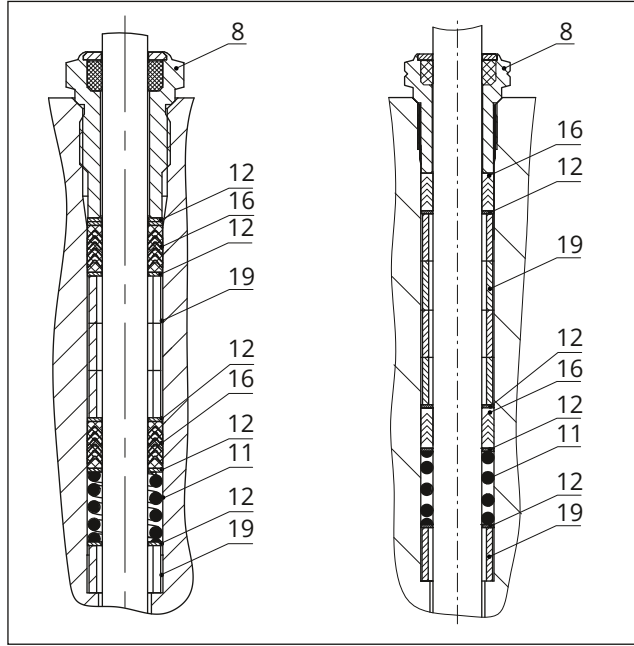


Fig. 25: Standard packing: DN 15 to 40/NPS 1/2 to 1 1/2 (left) and DN 50 to 100/NPS 2 to 4 (right)

- |                    |                 |
|--------------------|-----------------|
| 8 Threaded bushing | 16 Packing ring |
| 11 Spring          | 19 Spacer       |
| 12 Washer          |                 |


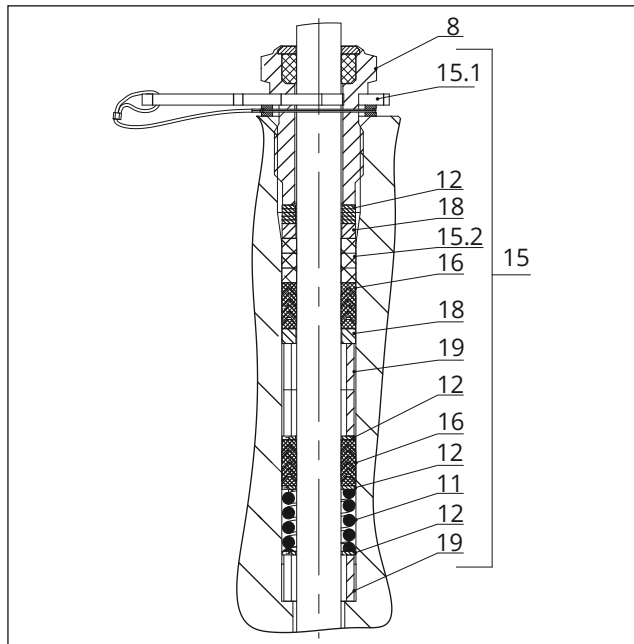


Fig. 26: ADSEAL packing: DN 15 to 40/NPS 1/2 to 1 1/2

- |                                      |                 |
|--------------------------------------|-----------------|
| 8 Threaded bushing                   | 15.2 Seal       |
| 11 Spring                            | 16 Packing ring |
| 12 Washer                            | 18 Bushing      |
| 15 Packing set (all pieces)          | 19 Spacer       |
| 15.1 Spacer ring with retaining ring |                 |



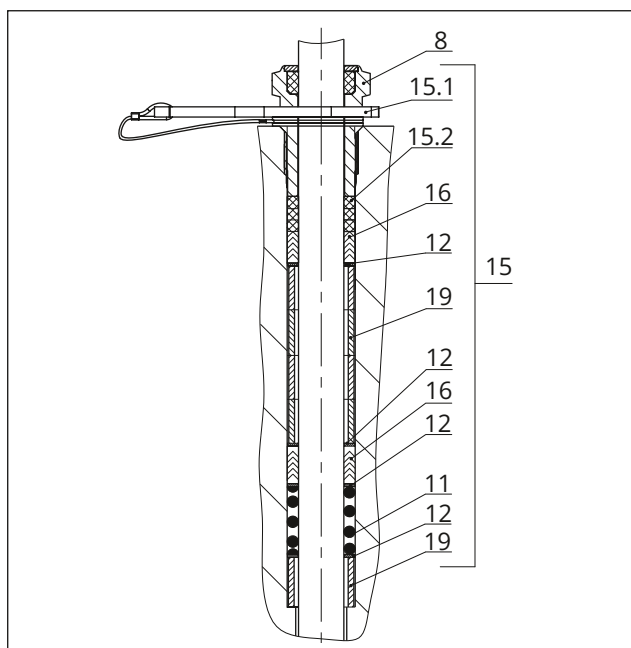

**Fig. 27: ADSEAL packing: DN 50 to 100/NPS 2 to 4**

8	Threaded bushing	15.2	Seal
11	Spring	16	Packing ring
12	Washer	18	Bushing
15	Packing set (all pieces)	19	Spacer
15.1	Spacer ring with retaining ring		

#### a) Standard version

##### Standard packing (PTFE)

1. Unscrew the castellated nut (92) and lift the yoke (3) off the flange (2).
2. Undo the body nuts (14) gradually in a criss-cross pattern.
3. Lift the flange (2) and plug with plug stem (5) off the body (1).
4. Unscrew the stem connector nut (9) and lock nut (10) from the plug stem.
5. Unscrew the threaded bushing (8).
6. Pull the plug with plug stem (5) out of the flange (2).
7. Pull the entire packing out of the packing chamber using a suitable tool.
8. Renew damaged parts. Clean the packing chamber thoroughly.
9. Apply a suitable lubricant to all packing parts and the plug stem (5).
10. Slide the plug with plug stem (5) into the flange (2).
11. Place the flange (2) together with the plug stem and plug (5) onto the body.

**Version with V-port plug:** Place the flange (2) onto the body, making sure that the largest V-shaped port of the plug faces towards the valve outlet.

**Version with perforated plug:** Place the flange (2) onto the valve body, making sure that the hole of the plug that releases the flow first faces toward the valve outlet.

See Chapter 5.3.2.

12. Carefully slide the packing parts over the plug stem into the packing chamber using a suitable tool. Observe the proper sequence (see Fig. 25).
13. Firmly press the plug (5) into the seat (4). Fasten down the flange (2) with the body nuts (14). Tighten the nuts gradually in a crisscross pattern. Observe tightening torques.
14. Screw in the threaded bushing (8) and tighten it. Observe tightening torques.
15. Place yoke (3) on the flange (2) and fasten using the castellated nut (92).
16. Loosely screw the lock nut (10) and stem connector nut (9) onto the plug stem.

#### ADSEAL packing

1. Proceed as described in previous section 'Standard packing (PTFE)', steps 1. to 11..
2. Carefully slide the packing parts over the plug stem into the packing chamber using a suitable tool. Observe the proper sequence (see Fig. 26 or Fig. 27).
3. Slide the seals (15.2) over the plug stem. Insert the wire of the red spacer ring (15.1) into the groove of the retaining ring. Slide the retaining ring over the plug stem.
4. Insert the red spacer ring (15.1) between the threaded bushing (8) and retaining ring (see Fig. 26 or Fig. 27).
5. Proceed as described in previous section 'Standard packing (PTFE)', steps 13. to 16..

#### b) Version with insulating section

##### Standard packing (PTFE)

1. Unscrew the castellated nut (92) and lift the yoke (3) off the insulating section (21).
2. Undo the body nuts (14) gradually in a criss-cross pattern.
3. Lift the flange (2) and plug with plug stem (5) off the body (1).
4. Unscrew the stem connector nut (9) and lock nut (10) from the plug stem (5).

5. Unscrew the threaded bushing (8).
6. Pull the plug with plug stem (5) out of the flange (2).
7. Pull the entire packing out of the packing chamber using a suitable tool.
8. Renew damaged parts. Clean the packing chamber thoroughly.
9. Apply a suitable lubricant to all packing parts and the plug stem (5).
10. Slide the plug with plug stem (5) into the flange (2).
11. Place the flange (2) together with the plug stem and plug (5) onto the body.

**Version with V-port plug:** Place the flange (2) onto the body, making sure that the largest V-shaped port of the plug faces towards the valve outlet.

**Version with perforated plug:** Place the flange (2) onto the valve body, making sure that the hole of the plug that releases the flow first faces toward the valve outlet.

See Chapter 5.3.2.

12. Carefully slide the packing parts over the plug stem into the packing chamber using a suitable tool. Observe the proper sequence (see Fig. 25).
13. Firmly press the plug (5) into the seat (4). Fasten down the flange (2) with the body nuts (14). Tighten the nuts gradually in a crisscross pattern. Observe tightening torques.
14. Screw in the threaded bushing (8) and tighten it. Observe tightening torques.
15. Place yoke (3) on the flange (2) and fasten using the castellated nut (92).
16. Loosely screw the lock nut (10) and stem connector nut (9) onto the plug stem.

### ADSEAL packing

1. Proceed as described in previous section 'Standard packing (PTFE)', steps 1. to 11..
2. Carefully slide the packing parts over the plug stem into the packing chamber using a suitable tool. Observe the proper sequence (see Fig. 26 or Fig. 27).
3. Slide the seals (15.2) over the plug stem extension. Insert the wire of the red spacer ring (15.1) into the groove of the retaining ring. Slide the retaining ring over the plug stem.

4. Insert the red spacer ring (15.1) between the threaded bushing (8) and retaining ring (see Fig. 26 or Fig. 27).
5. Proceed as described in previous section 'Standard packing (PTFE)', steps 13. to 16..

### 9.4.3 Replacing the seat and plug

---

#### NOTICE

##### **Risk of control valve damage due to incorrect servicing.**

⇒ *Seat and plug can only be replaced when all the following conditions are met:*

- *The nominal size is  $\leq$  NPS 4.*
- *The valve does not have a balanced plug.*
- *The valve does not have a bellows seal.*
- *The valve does not have a flow divider.*
- *The valve does not have an AC trim.*
- *The standard or ADSEAL packing is installed in the valve.*
- *The seat is screwed into the valve body as a separate part.*

⇒ *To replace seat and plug in other valve versions, contact our after-sales service.*

---

---

#### NOTICE

##### **Risk of damage to the facing of the seat and plug due to incorrect servicing.**

⇒ *Always replace both the seat and plug.*

---

---

#### Tip

*When replacing the seat and plug, SAMSON also recommends replacing the packing (see Chapter 9.4.2).*

---

#### **a) Standard version**

1. Unscrew the castellated nut (92) and lift the yoke (3) off the flange (2).
2. Undo the body nuts (14) gradually in a crisscross pattern.
3. Lift the flange (2) and plug with plug stem (5) off the body (1).
4. Replace the gasket (see Chapter 9.4.1, section a) Standard version).
5. Unscrew the stem connector nut (9) and lock nut (10) from the plug stem.
6. Unscrew the threaded bushing (8).

7. Pull the plug with plug stem (5) out of the flange (2).
8. Pull the entire packing out of the packing chamber using a suitable tool.
9. Make sure that the guide bushing (7) is not damaged. If necessary, replace the guide bushing using a suitable tool.
10. Unscrew the seat (4) using a suitable tool.
11. Apply a suitable lubricant to the thread and sealing cone of the new seat.
12. Screw in the seat (4). Observe tightening torques.
13. Apply a suitable lubricant to all packing parts and the plug stem (5).  
SAMSON recommends replacing the packing at the same time (see Chapter 9.4.2, section a) Standard version).
14. Slide the new plug with plug stem (5) into the flange (2).
15. Place the flange (2) together with the plug stem and plug (5) onto the body (1).

**Version with V-port plug:** Place the flange (2) onto the body, making sure that the largest V-shaped port of the plug faces towards the valve outlet.

**Version with perforated plug:** Place the flange (2) onto the valve body, making sure that the hole of the plug that releases the flow first faces toward the valve outlet.

See Chapter 5.3.2.

16. Carefully slide the packing parts over the plug stem into the packing chamber using a suitable tool. Observe the proper sequence (see Fig. 25 or Fig. 26 and Fig. 27).
17. Firmly press the plug (5) into the seat (4). Fasten down the flange (2) with the body nuts (14). Tighten the nuts gradually in a crisscross pattern. Observe tightening torques.
18. Screw in the threaded bushing (8) and tighten it. Observe tightening torques.
19. Place yoke (3) on the flange (2) and fasten using the castellated nut (92).
20. Loosely screw the lock nut (10) and stem connector nut (9) onto the plug stem.

#### b) Version with insulating section

1. Unscrew the castellated nut (92) and lift the yoke (3) off the insulating section (21).

2. Undo the body nuts (14) gradually in a criss-cross pattern.
  3. Lift the insulating section (21) together with the plug stem and plug (5) off the body (1).
  4. Replace the gasket (see Chapter 9.4.1, section b) Version with insulating section or bellows seal).
  5. Unscrew the stem connector nut (9) and lock nut (10) from the plug stem extension (25).
  6. Unscrew the threaded bushing (8).
  7. Pull the plug with plug stem (5) out of the insulating section (21).
  8. Pull the entire packing out of the packing chamber using a suitable tool.
  9. Make sure that the guide bushing (7) is not damaged. If necessary, replace the guide bushing using a suitable tool.
  10. Unscrew the seat (4) using a suitable tool.
  11. Apply a suitable lubricant to the thread and sealing cone of the new seat.
  12. Screw in the seat (4). Observe tightening torques.
  13. Apply a suitable lubricant to all packing parts and the new plug stem (5). SAMSON recommends replacing the packing as well (see Chapter 9.4.2, section b) Version with insulating section).
  14. Slide the new plug with plug stem (5) into the insulating section (21).
  15. Place the insulating section (21) together with the plug stem and plug (5) onto the body (1).
- Version with V-port plug:** Place the insulating section (21) onto the body, making sure that the largest V-shaped port of the plug faces towards the valve outlet.
- Version with perforated plug:** Place the insulating section (21) onto the valve body, making sure that the hole of the plug that releases the flow first faces toward the valve outlet.
- See Chapter 5.3.2.
16. Carefully slide the packing parts over the plug stem extension into the packing chamber using a suitable tool. Observe the proper sequence (see Fig. 25 or Fig. 26 and Fig. 27).
  17. Firmly press the plug (5) into the seat (4). Fasten down the insulating section (21) with the body nuts (14). Tighten the nuts gradually in a criss-cross pattern. Observe tightening torques.
  18. Screw in the threaded bushing (8) and tighten it. Observe tightening torques.

## Servicing

19. Place yoke (3) onto the insulating section (21) and fasten using the castellated nut (92).
20. Loosely screw the lock nut (10) and stem connector nut (9) onto the plug stem.

### 9.5 Ordering spare parts and operating supplies

Contact your nearest SAMSON subsidiary or SAMSON's After-sales Service for information on spare parts, lubricants and tools.

#### Spare parts

See Appendix for details on spare parts.

#### Lubricants

See document ► AB 0100 for details on suitable lubricants.

#### Tools

See document ► AB 0100 for details on suitable tools.

## 10 Decommissioning

The work described in this chapter is to be performed only by personnel appropriately qualified to carry out such tasks.

### **⚠ DANGER**

#### **Risk of bursting due to incorrect opening of pressurized equipment or components.**

Control valves and pipelines are pressure equipment that may burst when handled incorrectly. Flying projectile fragments or the release of process medium under pressure can cause serious injury or even death. Before starting any work on pressure-bearing or pressure-retaining parts belonging to the valve assembly:

- ⇒ Depressurize all plant sections affected and the valve (including the actuator). Release any stored energy.
- ⇒ Drain the process medium from the plant sections affected as well as from the valve.

### **⚠ WARNING**

#### **Risk of burn injuries due to cold components and pipelines.**

Depending on the process medium, valve components and pipelines may get extremely cold and cause cryogenic burns.

- ⇒ Follow the standard operating procedures provided by the plant operator.
- In the event of a potential risk:
- ⇒ Allow components and pipelines to reach ambient temperature.
  - ⇒ Wear protective clothing and safety gloves.

### **⚠ WARNING**

#### **Risk of personal injury due to pressurized components and as a result of process medium being discharged.**

Valves with a bellows seal have a test connection at the top on the intermediate piece.

- ⇒ Do not loosen the screw on the test connection while the valve is pressurized.

### **⚠ WARNING**

#### **Risk of hearing loss or deafness due to loud noise.**

Noise emission (e.g. cavitation or flashing) may occur during operation caused by the process medium and the operating conditions. Additionally, a loud noise may briefly occur through the sudden venting of the pneumatic actuator or pneumatic valve accessories not fitted with noise-reducing elements. Both can damage hearing.

- ⇒ Follow the standard operating procedures provided by the plant operator.

In the event of a potential risk:

- ⇒ Wear hearing protection when working near the valve.

### **⚠ WARNING**

#### **Crush hazard arising from moving parts.**

The control valve contains moving parts (actuator and plug stem), which can injure hands or fingers if inserted into the valve.

- ⇒ Do not insert hands or finger into the yoke while the air supply is connected to the actuator.
- ⇒ Before working on the pneumatic control valve, disconnect and lock the pneumatic air supply as well as the control signal.
- ⇒ Do not impede the movement of the actuator and plug stem by inserting objects into the yoke.
- ⇒ Before unblocking the actuator and plug stem after they have become blocked (e.g. due to seizing up after remaining in the same position for a long time), release any stored energy in the actuator (e.g. spring compression). See associated actuator documentation.

### **⚠ WARNING**

#### **Risk of personal injury due to exhaust air being vented or compressed air escaping from pneumatically operated components.**

When the valve is operated with a pneumatic actuator or pneumatic valve accessories, exhaust air is vented from the actuator, for example, while the valve is operating and when the valve opens or closes.

- ⇒ Wear eye protection when working in close proximity to pneumatic fittings and in the danger zone of the vent openings.

---

### **⚠ WARNING**

#### ***Risk of personal injury due to residual process medium in the valve.***

*While working on the valve, residual medium can flow out of the valve and, depending on its properties, cause personal injury, e.g. (chemical) burns.*

⇒ *Follow the standard operating procedures provided by the plant operator.*

*In the event of a potential risk:*

- ⇒ *If possible, drain the process medium from the plant sections affected and from the valve.*
  - ⇒ *Wear protective clothing, safety gloves, respiratory protection and eye protection.*
- 

To put the control valve out of operation for service work or to remove it from the pipeline, proceed as follows:

1. Close the shut-off valves upstream and downstream of the control valve to stop the process medium from flowing through the valve.
2. Completely drain the pipelines and valve.
3. Disconnect and lock the pneumatic air supply to depressurize the actuator.
4. Release any stored energy.
5. If necessary, allow the pipeline and valve components to cool down or warm up to the ambient temperature.

## 11 Removal

The work described in this chapter is to be performed only by personnel appropriately qualified to carry out such tasks.

### **⚠ WARNING**

#### **Risk of burn injuries due to cold components and pipelines.**

Depending on the process medium, valve components and pipelines may get extremely cold and cause cryogenic burns.

- ⇒ Follow the standard operating procedures provided by the plant operator.

*In the event of a potential risk:*

- ⇒ Allow components and pipelines to reach ambient temperature.
- ⇒ Wear protective clothing and safety gloves.

### **⚠ WARNING**

#### **Crush hazard arising from moving parts.**

The control valve contains moving parts (actuator and plug stem), which can injure hands or fingers if inserted into the valve.

- ⇒ Do not insert hands or finger into the yoke while the air supply is connected to the actuator.
- ⇒ Before working on the pneumatic control valve, disconnect and lock the pneumatic air supply as well as the control signal.
- ⇒ Do not impede the movement of the actuator and plug stem by inserting objects into the yoke.
- ⇒ Before unblocking the actuator and plug stem after they have become blocked (e.g. due to seizing up after remaining in the same position for a long time), release any stored energy in the actuator (e.g. spring compression). See associated actuator documentation.

### **⚠ WARNING**

#### **Risk of personal injury due to residual process medium in the valve.**

While working on the valve, residual medium can flow out of the valve and, depending on its properties, cause personal injury, e.g. (chemical) burns.

- ⇒ Follow the standard operating procedures provided by the plant operator.

*In the event of a potential risk:*

- ⇒ If possible, drain the process medium from the plant sections affected and from the valve.
- ⇒ Wear protective clothing, safety gloves, respiratory protection and eye protection.

### **⚠ WARNING**

#### **Risk of personal injury due to preloaded springs in pneumatic actuators.**

Valves in combination with pneumatic actuators with preloaded springs are under tension. These control valves with SAMSON Type 3271 or Type 3277 Pneumatic Actuators can be identified by the long bolts protruding from the bottom of the actuator.

- ⇒ Before starting any work on the actuator, which requires the actuator to be opened, or when the actuator stem has become blocked, relieve the compression from the preloaded springs (see associated actuator documentation).

### **⚠ WARNING**

#### **Risk of personal injury due to incorrect removal of the anti-rotation fixture under tension.**

Once the actuator has been mounted on the valve and the assembly is ready for use, the clamps (301) of the anti-rotation fixture on the plug stem are under tension.

- ⇒ Follow the instructions in this document during mounting or removal.
- ⇒ Do not loosen the screws (303) of the anti-rotation fixture while the force generated by the supply air and/or the actuator springs is transmitted to the actuator stem and the stem (9).
- ⇒ Remove the actuator from the valve or otherwise ensure that it cannot transmit any forces to the actuator stem before removing the anti-rotation fixture from the plug stem.

Before removing, make sure that the following conditions are met:

- The control valve is put out of operation (see Chapter 10).

### 11.1 Removing the valve from the pipeline

#### Version with flanges

1. Support the control valve to hold it in place when separated from the pipeline (see Chapter 4).
2. Unbolt the flanged joint.
3. Remove the valve from the pipeline (see Chapter 4).

#### Version with welding ends

1. Support the control valve to hold it in place when separated from the pipeline (see Chapter 4).
2. Cut the pipeline in front of the weld seam.
3. Remove the valve from the pipeline (see Chapter 4).

### 11.2 Removing the actuator from the valve

See associated actuator documentation.



## 12 Repairs

If the control valve does not function properly according to how it was originally sized or does not function at all, it is defective and must be repaired or exchanged.

---

### **NOTICE**

***Risk of valve damage due to incorrect service or repair work.***

- ⇒ Do not perform any repair work on your own.
  - ⇒ Contact SAMSON's After-sales Service for service and repair work.
- 

### 12.1 Returning devices to SAMSON

Defective devices can be returned to SAMSON for repair.

Proceed as follows to return devices:

1. Exceptions apply concerning some special device models ► [www.samsongroup.com](http://www.samsongroup.com) > SERVICE > After-sales Service > Returning goods.
2. Register the return shipment and include the following information by e-mail [returns-de@samsongroup.com](mailto:returns-de@samsongroup.com):
  - Type
  - Article no.
  - Configuration ID
  - Original order
  - Completed Declaration on Contamination, which can be downloaded from the Internet at: ► [www.samsongroup.com](http://www.samsongroup.com) > SERVICE > After-sales Service > Returning goods

**After checking your registration, we will send you a return merchandise authorization (RMA).**

3. Attach the RMA (together with the Declaration on Decontamination) to the outside of your shipment so that the documents are clearly visible.
4. Send the shipment to the address given on the RMA.

---


### **Note**

*Further information on returned devices and how they are handled can be found at:*

► [www.samsongroup.com](http://www.samsongroup.com) > Service > After-sales Service

---

### 13 Disposal

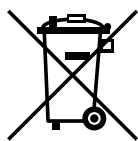

SAMSON is a producer registered in Europe, agency in charge

► [www.samsongroup.com](http://www.samsongroup.com) > About SAMSON > Environment, Social & Governance > Material Compliance > Waste electrical and electronic equipment (WEEE)  
WEEE reg. no.: DE 62194439

Information on substances listed as substances of very high concern (SVHC) on the candidate list of the REACH regulation can be found in the document "Additional Information on Your Inquiry/Order", which is added to the order documents, if applicable. This document includes the SCIP number assigned to the devices concerned. This number can be entered into the database on the European Chemicals Agency (ECHA) website (► <https://www.echa.europa.eu/scip-database>) to find out more information on the SVHC contained in the device.

---

#### **i Note**

*SAMSON can provide you with a recycling passport on request. Simply e-mail us at [aftersaleservice@samsongroup.com](mailto:aftersaleservice@samsongroup.com) giving details of your company address.*

---



#### **Tip**

*On request, SAMSON can appoint a service provider to dismantle and recycle the product as part of a distributor take-back scheme.*

---

- ⇒ Observe local, national and international refuse regulations.
- ⇒ Do not dispose of components, lubricants and hazardous substances together with your other household waste.

## 14 Certificates

The certificates shown were up to date at the time of publishing. The latest certificates can be found on our website: ► [www.samsongroup.com](http://www.samsongroup.com) > Products > Valves > 3251

Other optional certificates are available on request.

### 14.1 Certificates for Type 3251

These declarations are included on the next pages:

- Declaration of conformity in compliance with Pressure Equipment Directive 2014/68/EU:
  - Country of origin: Germany
  - Country of origin: France
- Declaration of conformity in compliance with Machinery Directive 2006/42/EC for Types 3251-1 and 3251-7 Control Valves
- Declaration of incorporation in compliance with Machinery Directive 2006/42/EC for Type 3251 Valve with other actuators other than the Type 3271 or Type 3277 Actuator
- Declaration of conformity in compliance with the requirements in TSG D7002-2006 for Chinese pressure equipment

# EU DECLARATION OF CONFORMITY TRANSLATION



## Module H / N° CE-0062-PED-H-SAM 001-22-DEU-rev-B

For the following products, SAMSON hereby declares under its sole responsibility:

Devices	Series	Type	Version
Globe valve	240	3241	EN, body of gray cast iron from DN 150, body of spheroidal-graphite iron, from DN 100, fluids G2, L1, L2 <sup>1)</sup> EN/ANSI, body of steel, etc., all fluids
Three-way valve	240	3244	EN, body of gray cast iron from DN 150, body of spheroidal-graphite iron, from DN 100, fluids G2, L1, L2 <sup>1)</sup> EN/ANSI, body of steel, etc., all fluids
Cryogenic valve	240	3248	EN/ANSI, all fluids
Globe valve	250	3251	EN/ANSI, all fluids
Globe valve	250	3251-E	EN/ANSI, all fluids
Three-way valve	250	3253	EN/ANSI, body of steel, etc., all fluids
Globe valve	250	3254	EN/ANSI, all fluids
Angle valve	250	3256	EN/ANSI, all fluids
Split-body valve	250	3258	EN, all fluids
Angle valve (IG standards)	250	3259	EN, all fluids
Globe valve	V2001	3321	EN, body of steel, etc., all fluids ANSI, all fluids
Three-way valve	V2001	3323	EN, body of steel, etc., all fluids ANSI, all fluids
Angle seat valve	---	3353	EN, body of steel, etc., all fluids
Silencer	3381	3381-1	EN/ANSI, single attenuation plate with welding ends, all fluids
		3381-3	EN/ANSI, all fluids
		3381-4	EN/ANSI, single attenuation plate multi-stage with welding ends, all fluids
Globe valve	240	3241	ANSI, body of gray cast iron, Class 125, from NPS 5, fluids G2, L1, L2 <sup>1)</sup>
Cryogenic valve	240	3246	EN/ANSI, all fluids
Three-way valve	250	3253	EN, body of gray cast iron from DN200 PN16, fluids G2, L1, L2 <sup>1)</sup>
Globe valve	290	3291	ANSI, all fluids
Angle valve	290	3296	ANSI, all fluids
Cryogenic valve	---	3588	ANSI, up to NPS 6, Class 600, all fluids
Globe valve	590	3591	ANSI, all fluids
Angle valve	590	3596	ANSI, all fluids
Cryogenic valve	590	3598	ANSI, NPS 3 to NPS 8, Class 900, all fluids
Control valve	590	3595	ANSI, all fluids
Globe valve	SMS	241GR	EN/ANSI, all fluids
Globe valve	SMS	251GR	EN/ANSI, all fluids
Globe valve	SMS	261GR	EN/ANSI, all fluids

<sup>1)</sup> Gases according to Article 4(1)(c.i), second indent  
Liquids according to Article 4(1)(c.ii)

that the products mentioned above comply with the requirements of the following standards:

<b>Directive of the European Parliament and of the Council on the harmonization of the laws of the Member States relating to the making available on the market of pressure equipment</b>	<b>2014/68/EU</b>	<b>of 15 May 2014</b>
<b>Applied conformity assessment procedure for fluids according to Article 4(1)</b>	<b>Module H</b>	<b>Certificate-No.: N°CE-0062-PED-H-SAM 001-22-DEU-rev-B by Bureau Veritas 0062</b>

The manufacturer's quality management system is monitored by the following notified body:

**Bureau Veritas Services SAS, 4 place des Saisons, 92400 Courbevoie, France**  
Applied harmonised standards and technical specifications:  
EN 16668 (incl. EN 12516-2, EN 12516-3, EN 12266-1), ASME B16.34

**Manufacturer: SAMSON AKTIENGESELLSCHAFT, Weismüllerstrasse 3, 60314 Frankfurt am Main, Germany**

Frankfurt am Main, February 17, 2025

*Andreas Widl*

Dr. Andreas Widl  
Chief Executive Officer (CEO)

*i.v. S Krause*

Sebastian Krause  
Vice President Product Development



AND  
EVERYTHING  
FLOWS

## DECLARATION UE DE CONFORMITE EU DECLARATION OF CONFORMITY

**DC014**  
**2025-08**

### Module A / Modul A

Par la présente, SAMSON REGULATION SAS déclare sous sa seule responsabilité pour les produits suivants :  
For the following products, SAMSON REGULATION SAS hereby declares under its sole responsibility:

Appareils / Devices	Type	Exécution / Version	Matériel du corps / body Material	PN Class	DN NPS	Fluides / fluids
Vanne de décharge / Back pressure reducing valve	2371-0	DIN	Acier / steel	P <sub>max</sub> T = 20°C 10 bar	DN 32 – 65	Tous fluides / all fluids
		ANSI		P <sub>max</sub> T = 70°F 150 psi	NPS 1 ¼ – 2 ½	
Détendeur alimen- taire / Pressure reducing valve	2371-1	DIN		P <sub>max</sub> T = 20°C 10 bar	DN 32 – 65	
		ANSI		P <sub>max</sub> T = 70°F 150 psi	NPS 1 ¼ – 2 ½	
Vanne de régulation passage droit / Globe valve	2423	à membrane with diaphragm	Fonte grise / cast iron	PN25	DN 65 – 125	G2 / L2 <sup>1)</sup>
		à soufflet with bellow	Fonte sphéroïdale / spheroidal graphite iron	PN25	DN 50 – 125	
			Acier / steel	PN16 PN25 PN40	DN 65 – 100 DN 50 – 100 DN 40 – 100	
Vanne de régulation passage droit / Globe valve	3241	DIN	Fonte grise / cast iron	PN10	DN 125 – 150	G2, L1, L2 <sup>1)</sup>
		DIN	Fonte grise & fonte sphéroïdale / cast iron & spheroidal graphite iron	PN16	DN 65 – 125	
		DIN	Fonte sphéroïdale / spheroidal graphite	PN 25	DN 50 – 80	
		ANSI	Fonte grise / cast iron	CI 125 CI 250	NPS 2 ½ – 4 NPS 1 ½ – 2	Tous fluides / all fluids
		DIN	Acier / steel	PN10 PN16 PN25	DN 32 – 100 DN 32 – 50 DN 32 – 40	
		ANSI		CI 150	NPS 1 ¼ – 2	
Vanne de régulation 3 voies / 3-way Valve	3244	DIN	Fonte grise / cast iron	PN10 PN16	DN 125 – 150 DN 65 – 125	G2, L1, L2 <sup>1)</sup>
		DIN	Acier / steel	PN10 PN16 PN25	DN 32 – 100 DN 32 – 50 DN 32 – 40	Tous fluides / all fluids
		ANSI		CI 150	NPS 1 ¼ – 2	
Vanne de régulation passage droit / Globe valve	3251	DIN	Acier / steel	PN16 PN25	DN 32 – 50 DN 32 – 40	Tous fluides / all fluids
		ANSI		CI 150	NPS 1 ¼ – 2	
Vanne équerre / Angle valve	3256	DIN	Acier / steel	PN16	DN 32 – 50	Tous fluides / all fluids
		ANSI		CI 150	NPS 1 ¼ – 2	
Vanne à segment sphérique / Segment ball valve	3310	DIN	Acier / steel	PN10 PN16 PN25	DN 40 – 50 DN 80 – 100 DN 40	Tous fluides / all fluids
		ANSI		CI 150	NPS 1 ½ – 2	
Vanne de régulation passage droit / Globe valve	3321	DIN	Fonte grise / cast iron	PN16	DN 65 – 100	G2, L1, L2 <sup>1)</sup>
		ANSI		CI 125	NPS 2 ½ – 4	
		DIN	Fonte sphéroïdale / spheroidal graphite iron	PN25	DN 50 – 80	Tous fluides / all fluids
		ANSI	Acier / steel	CI 150	NPS 1 ½ – 2	
Vanne de régulation 3 voies / 3-way Valve	3323	DIN	Fonte grise / cast iron : GJL-250	PN16	DN 65 – 100	G2, L1, L2 <sup>1)</sup>
		DIN	Fonte sphéroïdale / spheroidal graphite iron	PN25	DN 50 – 80	
Vanne papillon / Butterfly valve	3331	DIN	Acier / steel	PN10 PN 16-20	DN 50 – 100 DN 50	Tous fluides / all fluids
		ANSI	Acier / steel	CI 150	NPS 2	
Vanne à membrane / Diaphragm valve	3345	DIN	Acier / steel	P <sub>max</sub> T = 20°C 10 bar P <sub>max</sub> T = 20°C 16 bar	DN 32 – 100 DN 32 – 50	Tous fluides / all fluids
		ANSI		P <sub>max</sub> T = 70°F 150 psi or 230 psi	NPS 1 ¼ – 2	
		DIN	Fonte grise & fonte sphéroïdale / cast iron & spheroidal graphite iron	P <sub>max</sub> T = 20°C 10 bar P <sub>max</sub> T = 20°C 16 bar P <sub>max</sub> T = 20°C 40 bar	DN 125 – 150 DN 65 – 125 DN 40 – 50	G2, L1, L2 <sup>1)</sup>
		ANSI		P <sub>max</sub> T = 70°F 150 psi P <sub>max</sub> T = 70°F 230 psi P <sub>max</sub> T = 70°F 580 psi	NPS 2 ½ – 4 NPS 2 ½ – 5 NPS 1 ½ – 2	



AND  
EVERYTHING  
FLOWS

**DECLARATION UE DE CONFORMITE**  
**EU DECLARATION OF CONFORMITY**

**DC014**  
**2025-08**

**Module A / Modul A**

Appareils / Devices	Type	Exécution / Version	Matériel du corps / body Mate- rial	PN Class	DN NPS	Fluides / fluids
Vanne alimentaire / Sanitary valve	3347	DIN ANSI	Acier / steel	P <sub>max</sub> T = 20°C 10 bar P <sub>max</sub> T = 70°F 150 psi	DN 125 – 150 NPS 5 – 6	G2, L1, L2 <sup>1)</sup>
Vanne aseptique / Aseptic valve	3349	DIN ANSI	Acier / steel	P <sub>max</sub> T = 20°C 10 bar P <sub>max</sub> T = 20°C 16 bar P <sub>max</sub> T = 20°C 25 bar P <sub>max</sub> T = 70°F 150 psi P <sub>max</sub> T = 70°F 230 psi P <sub>max</sub> T = 70°F 360 psi	DN 32 – 100 DN 32 – 50 DN 32 – 40 NPS 1 ¼ – 4 NPS 1 ¼ – 2 NPS 1 ¼ – 1 ½	Tous fluides / all fluids
Vanne Tout ou Rien / On-Off Valve	3351	DIN ANSI DIN ANSI	Acier / steel Fonte grise & fonte sphéroïdale / cast iron & spheroidal graphite iron Fonte sphéroïdale / spheroidal graphite iron Fonte grise / cast iron	PN16 PN25 CI 150 PN16 PN25 CI 125	DN 32 – 50 DN 32 – 40 NPS 1 ¼ – 2 DN 65 – 100 DN 50 – 80 NPS 2 ½ – 4	Tous fluides / all fluids G2, L1, L2 <sup>1)</sup>
Bride de mesure / Measure flange	5090	DIN	Acier / steel	PN6 PN10 PN16 PN25 PN40	DN 200 – 500 DN 125 – 350 DN 65 – 200 DN 50 – 125 DN 40 – 100	G2, L2 <sup>1)</sup>

<sup>1)</sup> Gas selon l'article 4 § 1.c) i) / Gases Acc. to article 4 paragraphs 1.c) i)  
Liquide selon l'article 4 § 1.c) ii) / Liquids Acc. to article 4 paragraphs 1.c) ii)

la conformité avec le règlement suivant : / the conformity with the following requirement :

<b>La Directive du Parlement Européen et du Conseil d'harmonisation des lois des Etats Membres concernant la mise à disposition sur le marché d'équipements sous pression / Directive of the European Parliament and of the Council on the Harmonization of the laws of the Member States relating of the making available on the market of pressure equipment</b>	<b>2014/68/UE 2014/68/EU</b>	<b>Du / of 15.05.2014</b>
<b>Procédure d'évaluation de la conformité appliquée pour les fluides selon l'Article 4 § 1 Applied conformity assessment procedure for fluids according to Article 4 § 1</b>	<b>Module A / Modul A</b>	

**Normes techniques appliquées / Technical standards applied :**  
**DIN EN 12516-2, DIN EN 12516-3, ASME B16.34, DIN-EN 60534-4, DIN-EN 1092-1**

**Fabricant / manufacturer : Samson Régulation SAS, 1, rue Jean Corona, FR-69120 VAULX-EN-VELIN**

Vaulx-en-Velin, le 13/08/25

Bruno Soulas  
Directeur Stratégie et Développement / Head of Strategy and  
Development

## DECLARATION UE DE CONFORMITE EU DECLARATION OF CONFORMITY

**DC012**  
**2025-08**

### Module H / Modul H, N°/ Nr CE-0062-PED-H-SAM 001-23-FRA-rev-A

Par la présente, SAMSON REGULATION SAS déclare sous sa seule responsabilité pour les produits suivants :  
For the following products, SAMSON REGULATION SAS hereby declares under its sole responsibility:

Appareils / Devices	Type	Exécution / Version	Matériel du corps / body Material	PN Class	DN NPS	Fluides / fluids
Vanne de régulation passage droit / globe valve	3241	DIN	Fonte grise & fonte sphéroïdale / cast iron & spheroidal graphite iron	PN 16	DN 150	G2, L1, L2 <sup>1)</sup>
		ANSI		CI 125	NPS 6	
		DIN	Fonte sphéroïdale / spheroidal graphite iron	PN 25	DN 100 – 150	Tous fluides / all fluids
		DIN	Acier / steel	PN10 PN16 PN25 PN40	DN 125 – 150 DN 65 – 150 DN 50 – 150 DN 32 – 150	
		ANSI		CI 150 CI 300	NPS 2 ½ - 6 NPS 1¼ – 6	
Vanne de régulation 3 voies / 3-way Valve	3244	DIN	Fonte grise / cast iron	PN 16	DN 150	G2, L1, L2 <sup>1)</sup>
		DIN	Acier / steel	PN10 PN16 PN25 PN40	DN 125 – 150 DN 65 – 150 DN 50 – 150 DN 32 – 150	Tous fluides / all fluids
		ANSI		CI 150 CI 300	NPS 2 ½ – 6 NPS 1¼ – 6	
Vanne de régulation passage droit / globe valve	3251	DIN	Acier / steel	PN16 PN25 PN40 – 400	DN 65 – 150 DN 50 – 150 DN 32 – 150	Tous fluides / all fluids
		ANSI		CI 150 CI 300 - 2500	NPS 2 ½ – 6 NPS 1 ¼ – 6	
Vanne haute pression / High pressure valve	3252	DIN	Acier / steel	PN40 – 400	DN 32 – 80	Tous fluides / all fluids
		ANSI		CI 300 - 2500	NPS 1 ¼ – 3	
Vanne équerre / Angle valve	3256	DIN	Acier / steel	PN16 PN40 – 400	DN 65 – 150 DN 32 – 150	Tous fluides / all fluids
		ANSI		CI 150 CI 300 - 2500	NPS 2 ½ – 6 NPS 1 ¼ – 6	
Vanne à segment sphérique / Segment ball valve	3310	DIN	Acier / steel	PN10 PN16 PN25 PN40	DN 150 DN 80 – 150 DN 50 – 150 DN 40 – 150	Tous fluides / all fluids
		ANSI		CI 150 CI 300	NPS 3 – 6 NPS 1 ½ – 6	
Vanne de régulation passage droit / globe valve	3321	DIN	Fonte sphéroïdale / spheroidal graphite iron	PN 25	DN 100	G2, L1, L2 <sup>1)</sup>
		DIN	Acier / steel	PN16 PN40	DN 65 – 100 DN 32 – 100	Tous fluides / all fluids
		ANSI		CI 150 CI 300	NPS 2 ½ – 4 NPS 1½ – 4	
Vanne de régulation 3 voies / 3-way Valve	3323	DIN	Fonte sphéroïdale / spheroidal graphite iron	PN 25	DN 100	G2, L1, L2 <sup>1)</sup>
		DIN	Acier / steel	PN16 PN40	DN 65 – 100 DN 32 – 100	Tous fluides / all fluids
		ANSI		CI 150 CI 300	NPS 2 ½ – 4 NPS 1¼ – 2	
Vanne papillon / Butterfly valve	3331	DIN	Acier / steel	PN10 PN16 - 20 PN25 – 50	DN 150 – 400 DN 80 - 400 DN 50 – 400	Tous fluides / all fluids
		ANSI		CI 150 CI 300	NPS 3 – 16 NPS 2 - 16	
Vanne à membrane / Diaphragm valve	3345	ANSI	Fonte grise & fonte sphéroïdale / cast iron & spheroidal graphite iron	P <sub>max</sub> T= 70°F 150 psi P <sub>max</sub> T= 70°F 230 psi	NPS 5 – 6 NPS 6	G2, L1, L2 <sup>1)</sup>
			Acier / steel	P <sub>max</sub> T= 70°F 150 - 230 psi	NPS 2 ½ – 6	Tous fluides / all fluids



AND  
EVERYTHING  
FLOWS

**DECLARATION UE DE CONFORMITE  
EU DECLARATION OF CONFORMITY**

**DC012  
2025-08**

**Module H / Modul H, N°/ Nr CE-0062-PED-H-SAM 001-23-FRA-rev-A**

Appareils / Devices	Type	Exécution / Version	Matériel du corps / body Material	PN Class	DN NPS	Fluides / fluids
Vanne alimentaire / Sanitary valve	3347	DIN	Acier / steel	$P_{max} T = 20^{\circ}C$ 16 bar $P_{max} T = 20^{\circ}C$ 40 bar $P_{max} T = 20^{\circ}C$ 63 bar	DN 150 DN 65 – 150 DN 32 – 150	G2, L1, L2 <sup>1)</sup>
		ANSI		$P_{max} T = 70^{\circ}F$ 230 psi $P_{max} T = 70^{\circ}F$ 580 psi $P_{max} T = 70^{\circ}F$ 910 psi	NPS 6 NPS 2 1/2 – 6 NPS 1 1/4 – 6	
Vanne aseptique / Aseptic valve	3349_HV01	DIN	Acier / steel	$P_{max} T = 20^{\circ}C$ 16 bar $P_{max} T = 20^{\circ}C$ 25 bar	DN 65 – 100 DN 50 – 100	Tous fluides / all fluids
		ANSI		$P_{max} T = 70^{\circ}F$ 230 psi $P_{max} T = 70^{\circ}F$ 360 psi	NPS 2 1/2 – 4 NPS 2 – 4	
Vanne Tout ou Rien / On-Off Valve	3351	DIN	Fonte sphéroïdale / spheroidal graphite iron	PN 25	DN 100	G2, L1, L2 <sup>1)</sup>
		DIN	Acier / steel	PN16 PN25 PN40	DN 65 – 100 DN 50 – 100 DN 32 – 100	Tous fluides / all fluids
		ANSI		Cl 150 Cl 300	NPS 2 1/2 – 4 NPS 1 1/4 – 4	
Bride de mesure / Measure flange	5090	DIN	Acier / steel	PN10	DN 400 – 500	G2, L2 <sup>1)</sup>
				PN16	DN 250 – 500	
				PN25	DN 150 – 500	
				PN40	DN 125 – 500	

<sup>1)</sup> Gas selon l'article 4 § 1.c) i) / Gases Acc. to article 4 paragraphs 1.c) i)  
Liquide selon l'article 4 § 1.c) ii) / Liquids Acc. to article 4 paragraphs 1.c) ii)

la conformité avec le règlement suivant : / the conformity with the following requirement:

<b>La Directive du Parlement Européen et du Conseil d'harmonisation des lois des Etats Membres concernant la mise à disposition sur le marché d'équipements sous pression / Directive of the European Parliament and of the Council on the Harmonization of the laws of the Member States relating of the making available on the market of pressure equipment</b>	<b>2014/68/UE 2014/68/EU</b>	<b>Du / of 15.05.2014</b>
<b>Procédure d'évaluation de la conformité appliquée pour les fluides selon l'Article 4 § 1 Applied conformity assessment procedure for fluids according to Article 4 § 1</b>	<b>Module H / Modul H</b>	<b>Certificat n° CE- 0062-PED-H-SAM 001-23-FRA-rev-A</b>

**Normes techniques appliquées / Technical standards applied :**  
**DIN EN 12516-2, DIN EN 12516-3, ASME B16.34, DIN-EN 60534-4, DIN-EN 1092-1**

Le système de contrôle Qualité du fabricant est effectué par l'organisme de certification suivant :  
The manufacturer's quality management system is monitored by the following notified body:

**Bureau Veritas Services SAS N°/Nr 0062, 4 place des Saisons 92400 COURBEVOIE**  
**Fabricant / manufacturer : Samson Régulation SAS, 1, rue Jean Corona, FR-69120 VAULX-EN-VELIN**

Vaulx-en-Velin, le 13/08/25

Bruno Soulas  
Directeur Général – Directeur Stratégie et Développement /  
Director general - Head of Strategy and Development





## Declaration of Conformity of Final Machinery

in accordance with Annex II, section 1.A. of the Directive 2006/42/EC

For the following products:

**Types 3251-1/3251-AM-1 and 3251-7/3251-AM-7 Pneumatic Control Valves consisting of the Type 3251/3251-AM Valve and Type 3271/Type 3277 Pneumatic Actuator**

We hereby declare that the machinery mentioned above complies with all applicable requirements stipulated in Machinery Directive 2006/42/EC.

For product descriptions of the valve and actuator, refer to:

- Type 3251/3251-AM Valve (DIN): Mounting and Operating Instructions EB 8051
- Type 3251/3251-AM Valve (ANSI): Mounting and Operating Instructions EB 8052
- Types 3271 and 3277 Actuators: Mounting and Operating Instructions EB 8310-X

Valve accessories (e.g. positioners, limit switches, solenoid valves, lock-up valves, supply pressure regulators, volume boosters and quick exhaust valves) are classified as machinery components in this declaration of conformity and do not fall within the scope of the Machinery Directive as specified in § 35 and § 46 of the Guide to Application of the Machinery Directive 2006/42/EC issued by the European Commission. In the SAMSON Manual H 02 titled "Appropriate Machinery Components for SAMSON Pneumatic Control Valves with a Declaration of Conformity of Final Machinery", SAMSON defines the specifications and properties of appropriate machinery components that can be mounted onto the above specified final machinery.

Referenced technical standards and/or specifications:

- VCI, VDMA, VGB: "Leitfaden Maschinenrichtlinie (2006/42/EG) – Bedeutung für Armaturen, Mai 2018" [German only]
- VCI, VDMA, VGB: "Zusatzdokument zum „Leitfaden Maschinenrichtlinie (2006/42/EG) – Bedeutung für Armaturen vom Mai 2018" [German only], based on DIN EN ISO 12100:2011-03

Comment:

Information on residual risks of the machinery can be found in the mounting and operating instructions of the valve and actuator as well as in the referenced documents listed in the mounting and operating instructions.

Persons authorized to compile the technical file:

SAMSON AG, Weismüllerstraße 3, 60314 Frankfurt am Main, Germany  
Frankfurt am Main, 9 January 2024

Norbert Tollas  
Senior Vice President  
Global Operations

Peter Scheermesser  
Director  
Product Maintenance & Engineered Products

# DECLARATION OF INCORPORATION

## TRANSLATION



### Declaration of Incorporation in Compliance with Machinery Directive 2006/42/EC

For the following products:

#### **Type 3251/3251-AM Globe Valve**

We certify that the Type 3251/3251-AM Globe Valves are partly completed machinery as defined in the Machinery Directive 2006/42/EC and that the safety requirements stipulated in Annex I, 1.1.2, 1.1.3, 1.1.5, 1.3.2, 1.3.4 and 1.3.7 are observed. The relevant technical documentation described in Annex VII, part B has been compiled.

Products we supply must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Machinery Directive 2006/42/EC.

Operators are obliged to install the products observing the accepted industry codes and practices (good engineering practice) as well as the mounting and operating instructions. Operators must take appropriate precautions to prevent hazards that could be caused by the process medium and operating pressure in the valve as well as by the signal pressure and moving parts.

The permissible limits of application and mounting instructions for the products are specified in the associated data sheets as well as the mounting and operating instructions; the documents are available in electronic form on the Internet at [www.samsongroup.com](http://www.samsongroup.com).

For product descriptions of the valve, refer to:

- Type 3251/3251-AM Valve (DIN): Mounting and Operating Instructions EB 8051
- Type 3251/3251-AM Valve (ANSI): Mounting and Operating Instructions EB 8052

Referenced technical standards and/or specifications:

- VCI, VDMA, VGB: Leitfaden Maschinenrichtlinie (2006/42/EG) – Bedeutung für Armaturen, May 2018 [German only]
- VCI, VDMA, VGB: Zusatzdokument zum „Leitfaden Maschinenrichtlinie (2006/42/EG) – Bedeutung für Armaturen“ vom Mai 2018 [German only], based on DIN EN ISO 12100:2011-03

Comments:

- See mounting and operating instructions for residual hazards.
- Also observe the referenced documents listed in the mounting and operating instructions.

Persons authorized to compile the technical file:

SAMSON AG, Weismüllerstraße 3, 60314 Frankfurt am Main, Germany  
Frankfurt am Main, 9 January 2024

Stephan Giesen  
Director  
Product Management

Peter Scheermesser  
Director  
Product Maintenance & Engineered Products



## DECLARATION OF CONFORMITY

For the following products

DC016

2019-08

### Type 3241, 3244, 3249, 3251, 3252, 3256, 3347, 3321, 3349 Control Valve

Certificate nb°: TSX71002520191340

Test report nb°: 2019TSFM750-TYP3241  
and 2019TSFM751-TYP3251

Valves 3241 and 3251 have passed the evaluation tests according to the requirements of TSG D7002-2006 Chinese Pressure Equipment.

As a result, all of the above check valves meet the requirements of TSG D7002-2006 for Chinese pressure equipment according to the following characteristics:

- DN 50 to 200 PN ≤ 5 MPa (50 bar) or NPS 2 to NPS 8 Class ≤ 300,
- DN 50 to 100 PN ≤ 42 MPa (420 bar) or NPS 2 to NPS 4 Class ≤ 2500,
- Operating temperature: -29°C ≤ T ≤ 425°C.

**特种设备型式试验证书**  
Type-Test Certification of Special Equipment  
(压力管道元件)  
(Pressure Piping Components)

证书编号/Certification No: TSX71002520191340

制造单位/Manufacturer: SAMSON REGULATION S.A.S  
单位地址/Address: 1 rue Jean Corona 69120 Vaulx-en-Velin, France  
设备类别/Equipment Category: 金属阀门/ Metal Valves  
产品名称(品种)/Name of the Products (Categories): 调节阀/ Controls Valves  
产品型号/Type of the Products: TYP3241 NPS4/CL300, TYP3251 NPS2/CL2500  
型式检验报告编号/Number of the Type-Test Report: 2019TSFM750, 2019TSFM751

经型式检验, 确认符合 TSG D7002-2006《压力管道元件型式试验规则》的要求。  
本证书覆盖以下型号规格产品/ The products have undergone the type test, met the requirements of the TSG D7002-2006 Pressure Piping Components Type Test Regulation, which covers the following specifications:

公称压力/Nominal Pressure ≤ PN42.0MPa(CL2500),  
公称尺寸/Nominal Size DN50mm~DN100mm (NPS2~NPS4),  
公称压力/Nominal Pressure ≤ PN5.0MPa(CL300),  
公称尺寸/Nominal Size DN50mm~DN200mm (NPS2~NPS8),  
适用温度/Operating Temperature -29°C~425°C, 调节阀/ Controls Valves.

国家泵阀产品质量监督检验中心  
National Quality Supervision and Inspection  
Centre of Pump and Valve Products

合肥通用机电产品检测院有限公司  
Hefei General Machinery & Electrical  
Products Inspection Institute  
2019年7月8日/ July. 8, 2019

SAMSON REGULATION S.A.

Bruno Soulas  
Head of Administration

SAMSON REGULATION S.A.

Joséphine Signoles-Fontaine  
QSE Manager

### 14.2 Certificates for Type 3251-AM

These declarations are included on the next pages:

- Declaration of conformity in compliance with Pressure Equipment Directive 2014/68/EU:
  - Country of origin: Germany
- Declaration of conformity in compliance with Machinery Directive 2006/42/EC for Types 3251-AM-1 and 3251-AM-7 Control Valves
- Declaration of incorporation in compliance with Machinery Directive 2006/42/EC for Type 3251-AM Valve with other actuators other than the Type 3271 or Type 3277 Actuator



### Modul H / Zertifikat-Nr.: DGR-0036-QS-1430-23

SAMSON erklärt in alleiniger Verantwortung als Hersteller für additiv gefertigte Produkte:

Geräte	Bauart	Typ	Ausführung, Erläuterung
Durchgangsventil	250	3251-AM	<p>EN/ANSI, bis DN 100/NPS 4, bis PN 400/Class 2500, alle Fluide</p> <p>Werkstoff, additiv gefertigt: SPBF 4401/4404/316/316 (wie gedruckt); SPBF AT 4401/4404/316/316L (Lösungsgeglüht)</p> <p>Temperaturbereich -196...+450 °C</p> <p>Tieftemperaturen gemäß: ASME B31.3 bis -254 °C EN 10222-5 bis -196 °C</p>

die Konformität mit nachfolgender Anforderung:

Richtlinie des Europäischen Parlaments und des Rates zur Harmonisierung der Rechtsvorschriften der Mitgliedstaaten über die Bereitstellung von Druckgeräten auf dem Markt	2014/68/EU	vom 15. Mai 2014
Angewandtes Konformitätsbewertungsverfahren für Fluide nach Art. 4 Abs. 1, Gase nach Artikel 4 Absatz 1 Buchstabe c Ziffer i, Flüssigkeiten nach Artikel 4 Absatz 1 Buchstabe c Ziffer ii	Anhang III Modul H	Zertifikat-Nr.: DGR-0036-QS-1430-23 durch TÜV SÜD 0036 gültig bis: 28.11.2026

Das Qualitätssicherungssystem des Herstellers wird von folgender notifizierter Stelle überwacht:


**TÜV SÜD Industrie Service GmbH**  
Westendstraße 199  
80686 München  
Germany


Angewandte harmonisierte Normen und technische Standards:

DIN EN 16668:2018-05, DIN/TS 17026:2020-10 (prEN 13445-14);  
DIN EN 12516-2:2022-08, DIN EN 12266-1:2012-06, ASME B16.34-2020;  
Druck/Temperatur-Zuordnungen entsprechend DIN EN 1092-1:2018-12 oder ASME B16.34:2020;

Hersteller: SAMSON AKTIENGESELLSCHAFT, Weismüllerstraße 3, 60314 Frankfurt am Main, Germany

Frankfurt am Main, 08. März 2024

  
ppa. Norbert Tollas  
Senior Vice President  
Global Operations

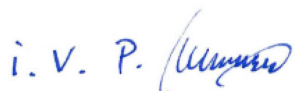  
i.V. Peter Scheermesser  
Director  
Product Maintenance & Engineered Products



## Declaration of Conformity of Final Machinery

in accordance with Annex II, section 1.A. of the Directive 2006/42/EC

For the following products:

**Types 3251-1/3251-AM-1 and 3251-7/3251-AM-7 Pneumatic Control Valves consisting of the Type 3251/3251-AM Valve and Type 3271/Type 3277 Pneumatic Actuator**

We hereby declare that the machinery mentioned above complies with all applicable requirements stipulated in Machinery Directive 2006/42/EC.

For product descriptions of the valve and actuator, refer to:

- Type 3251/3251-AM Valve (DIN): Mounting and Operating Instructions EB 8051
- Type 3251/3251-AM Valve (ANSI): Mounting and Operating Instructions EB 8052
- Types 3271 and 3277 Actuators: Mounting and Operating Instructions EB 8310-X

Valve accessories (e.g. positioners, limit switches, solenoid valves, lock-up valves, supply pressure regulators, volume boosters and quick exhaust valves) are classified as machinery components in this declaration of conformity and do not fall within the scope of the Machinery Directive as specified in § 35 and § 46 of the Guide to Application of the Machinery Directive 2006/42/EC issued by the European Commission. In the SAMSON Manual H 02 titled "Appropriate Machinery Components for SAMSON Pneumatic Control Valves with a Declaration of Conformity of Final Machinery", SAMSON defines the specifications and properties of appropriate machinery components that can be mounted onto the above specified final machinery.

Referenced technical standards and/or specifications:

- VCI, VDMA, VGB: "Leitfaden Maschinenrichtlinie (2006/42/EG) – Bedeutung für Armaturen, Mai 2018" [German only]
- VCI, VDMA, VGB: "Zusatzdokument zum „Leitfaden Maschinenrichtlinie (2006/42/EG) – Bedeutung für Armaturen vom Mai 2018" [German only], based on DIN EN ISO 12100:2011-03

Comment:

Information on residual risks of the machinery can be found in the mounting and operating instructions of the valve and actuator as well as in the referenced documents listed in the mounting and operating instructions.

Persons authorized to compile the technical file:

SAMSON AG, Weismüllerstraße 3, 60314 Frankfurt am Main, Germany  
Frankfurt am Main, 9 January 2024

Norbert Tollas  
Senior Vice President  
Global Operations

Peter Scheermesser  
Director  
Product Maintenance & Engineered Products



# DECLARATION OF INCORPORATION

## TRANSLATION



### Declaration of Incorporation in Compliance with Machinery Directive 2006/42/EC

For the following products:

#### **Type 3251/3251-AM Globe Valve**

We certify that the Type 3251/3251-AM Globe Valves are partly completed machinery as defined in the Machinery Directive 2006/42/EC and that the safety requirements stipulated in Annex I, 1.1.2, 1.1.3, 1.1.5, 1.3.2, 1.3.4 and 1.3.7 are observed. The relevant technical documentation described in Annex VII, part B has been compiled.

Products we supply must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Machinery Directive 2006/42/EC.

Operators are obliged to install the products observing the accepted industry codes and practices (good engineering practice) as well as the mounting and operating instructions. Operators must take appropriate precautions to prevent hazards that could be caused by the process medium and operating pressure in the valve as well as by the signal pressure and moving parts.

The permissible limits of application and mounting instructions for the products are specified in the associated data sheets as well as the mounting and operating instructions; the documents are available in electronic form on the Internet at [www.samsongroup.com](http://www.samsongroup.com).

For product descriptions of the valve, refer to:

- Type 3251/3251-AM Valve (DIN): Mounting and Operating Instructions EB 8051
- Type 3251/3251-AM Valve (ANSI): Mounting and Operating Instructions EB 8052

Referenced technical standards and/or specifications:

- VCI, VDMA, VGB: Leitfaden Maschinenrichtlinie (2006/42/EG) – Bedeutung für Armaturen, May 2018 [German only]
- VCI, VDMA, VGB: Zusatzdokument zum „Leitfaden Maschinenrichtlinie (2006/42/EG) – Bedeutung für Armaturen“ vom Mai 2018 [German only], based on DIN EN ISO 12100:2011-03

Comments:

- See mounting and operating instructions for residual hazards.
- Also observe the referenced documents listed in the mounting and operating instructions.

Persons authorized to compile the technical file:

SAMSON AG, Weismüllerstraße 3, 60314 Frankfurt am Main, Germany  
Frankfurt am Main, 9 January 2024

Stephan Giesen  
Director  
Product Management

Peter Scheermesser  
Director  
Product Maintenance & Engineered Products

## 15 Appendix

### 15.1 Tightening torques, lubricants and tools

► AB 0100 tools, tightening torques and lubricants

### 15.2 Spare parts


1	Body/body with integrated seat
2	Flange/valve bonnet
3	Yoke
4	Seat (for bodies with screwed-in seat)
5	Plug (with plug stem)
6	Bellows nut
7	Guide bushing (flange)
8	Threaded bushing (packing nut)
9	Stem connector nut
10	Lock nut
11	Spring
12	Washer
13	Stud bolt
14	Body nut
15	Packing set
16	Packing rings
17	Body gasket
19	Bushing
21	Insulating section
22	Bellows seal
24	Guide bushing
25	Plug stem extension
26	Label (bellows seal or insulating section)
27/28	Fastening parts
31/34	
29	Plug for version with bellows seal
30	Retaining washers
32	Screw
33	Nut
37	Plug stem with metal bellows
39	Gasket
42/43	Screw plug with seal
44	Ring/ring nut <sup>1)</sup>
45	Seal <sup>1)</sup>
46	Gasket <sup>1)</sup>
47	Support <sup>1)</sup>
48	Hex screw <sup>1)</sup>
49	Hex screw <sup>1)</sup>
50	Lock <sup>1)</sup>
51	Guide <sup>1)</sup> (several guides only for version with graphite seal)
52	Ring <sup>1)</sup> (only for version with graphite seal)
53	Snap ring <sup>1)</sup>
61	Flow divider ST 2 <sup>2)</sup>
62	Flow divider ST 1 or ST 3 <sup>2)</sup>
63	Ring <sup>2)</sup>

64	Gasket <sup>2)</sup>
65	Gasket <sup>2)</sup>
80	Nameplate
81	Grooved pin
82	Screw
83	Hanger
84	Travel indicator scale
85	Screw
91	Protective cap
92	Castellated nut
93	Expansion sleeve
94	Expansion sleeve
101	Bellows bonnet
102/	Screw with snap ring <sup>1)</sup> (only for version with bellows seal)
103	

<sup>1)</sup> Version with balanced valve plug

<sup>2)</sup> Version with flow divider



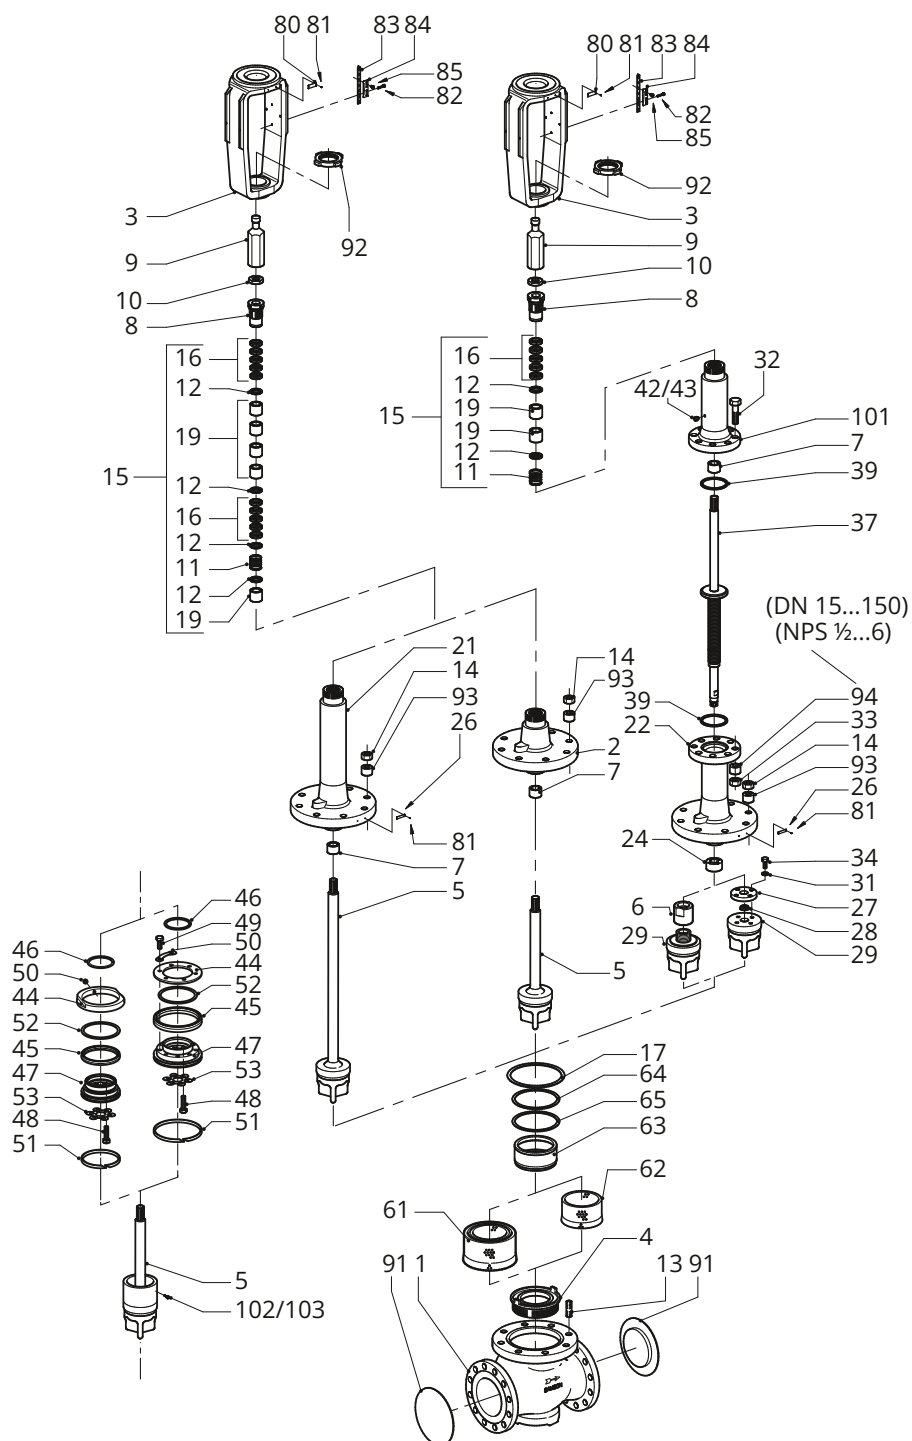

### 15.3 After-sales service

Contact our after-sales service for support concerning service or repair work or when malfunctions or defects arise.

#### E-mail contact

You can reach our after-sales service at the following e-mail address:  
aftersaleservice@samsongroup.com

#### Addresses of SAMSON AG and its subsidiaries

The addresses of SAMSON AG, its subsidiaries, representatives and service facilities worldwide can be found in product catalogs or on our website (► [www.samsongroup.com](http://www.samsongroup.com)).

#### Required specifications

Please submit the following details:

- Order number and position number in the order
- Type, model number, nominal size and valve version
- Pressure and temperature of the process medium
- Flow rate in m<sup>3</sup>/h or cu.ft/min
- Bench range of the actuator (e.g. 0.2 to 1 bar)
- Is a strainer installed?
- Installation drawing





SAMSON AKTIENGESELLSCHAFT  
Weismüllerstraße 3 · 60314 Frankfurt am Main, Germany  
Phone: +49 69 4009-0 · Fax: +49 69 4009-1507  
samson@samsongroup.com · [www.samsongroup.com](http://www.samsongroup.com)